

User's Manual

Digital Music Player



MP710



Table of Contents

Introduction 	6
Package Contents 	6
Features 	8
System Requirements 	8
Safety Precautions 	9
■ General Use	9
■ Caution: Risk of Deafness	9
■ Reminders	10
MP710 Controls 	11
Music Playback Screen 	12
Basic Operation 	13
■ Charging the Battery	13
■ Power ON	13
■ Power OFF	14
■ Play a Song	14
■ Pause a Song	14
■ Next Track	14
■ Previous Track	14
■ Fast Forward	14
■ Fast Rewind	14
■ Increase Volume	14
■ Decrease Volume	14
■ Main Menu	14
■ File Browser	15
■ Reset	15
■ Lock	15
MUSIC Mode 	16
■ Playing Audio Files	16
■ Adjusting the Volume	17
■ Repeat Mode	17
■ Equalizer (EQ) Mode	18
■ User EQ Customization:	18
■ A-B Repeat	19
■ Volume Limit	20

■ Add Bookmark.....	21
■ Add to My Playlist.....	21
■ Removing a Song from My Playlist.....	22
■ Lyrics Sync.....	23
■ Delete.....	23
FITNESS Mode 	25
■ Fitness Menu.....	25
■ Enter Fitness Mode	25
■ Fitness Setting.....	25
■ Body Information Settings.....	26
■ Enter Gender.....	26
■ Enter Age.....	26
■ Enter Height	26
■ Enter Weight	27
■ Enter Footstep	27
■ Sport Goal Setting	27
■ Goal: Normal	28
■ Goal: Step.....	28
■ Goal: Distance.....	28
■ Goal: Calorie	29
■ Goal: Timer.....	29
■ Unit Setting	29
■ History	30
RECORD Mode 	32
■ Record menu.....	32
■ Voice Recording.....	32
■ Line-in Recording	33
■ Recording the Radio.....	34
■ Recordings.....	34
■ Record Settings	35
■ Set Record Quality	35
■ Track AVR (Automatic voice record) Mode.....	35
■ Set Record Source	35
■ Set Record Scene	35
RADIO Mode 	37
■ Listen to the Radio	37
■ Station List	37
■ Manual Tune.....	38

■ Adjusting the Volume	39
■ Recording the Radio.....	39
■ Saving a Radio Station	40
■ Delete Channel.....	41
■ Clear All Presets	42
■ Auto Search	42
■ Recalling a Saved Station	42
■ FM Band	43
PHOTO Mode 	45
■ Displaying Photos	45
■ Brightness.....	45
■ Backlight Timer.....	46
■ Slideshow Interval	46
■ Picture Repeat Mode	47
■ Browse Mode	47
■ Delete.....	48
VIDEO Mode 	50
■ Playing Video Files	50
■ Brightness.....	51
■ Repeat Mode	51
■ Delete.....	52
TOOL Mode 	53
■ Tool Menu	53
■ Schedule FM Recording.....	53
■ Switch	53
■ Schedule Cycle	54
■ FM Frequency	55
■ FM Volume.....	55
■ Stopwatch	55
■ Text Reader	56
■ Reading E-Books and Text Files	56
■ Auto Page Turn Interval	57
■ Delete EBook	57
■ Add Bookmark	58
■ Bookmark Select	58
■ Delete Bookmark	58
■ Page Select	59
File Browser 	61

■ Browsing the Internal Memory	61
■ Deleting Files	61
Settings 	63
■ Settings Menu	63
■ Power Saving	63
■ Sleep Timer	64
■ Brightness.....	64
■ Backlight Time	65
■ Screen Saver.....	66
■ Date & Time.....	66
■ Language.....	67
■ Format Internal Memory.....	67
■ Factory Settings	68
Driver Installation 	69
■ Driver Installation for Windows XP, Vista, 7 and 8.....	69
■ Driver Installation for Mac OS X 10.0, or Later.....	69
■ Driver Installation for Linux Kernel 2.4, or Later	69
Connecting to a Computer 	70
■ Transferring Files to the MP710	70
Troubleshooting 	73
Specifications 	75
Ordering Information 	75
Recycling & Environmental Considerations 	76
Warranty Policy 	77

Introduction |

Thank you for purchasing **Transcend MP710**, an advanced MP3 Player that can play **music** and display **videos** and **photos**. The MP710 combines all the advantages of a great sounding portable MP3 player with the benefits of a USB flash drive, and includes many extra features such as a Recordable FM Radio, advanced digital voice recording, karaoke-style lyrics display and A-B repeat functions. Your MP710 can also be used to read **E-books** and supports Hi-Speed USB 2.0 for faster uploading and downloading of files connected to a computer. The A-B repeat feature allows you to continuously replay the specific sections of audio file – ideal for learning foreign languages and reviewing an important part of a song or recording. In addition, you can make personal memos and record meetings or class lectures using the advanced digital voice recorder with built-in microphone.

Package Contents |

The MP710 package includes the following items:

- MP710



- Earhook Earphones



- USB Cable



■ Line-In Recording Cable



■ Quick Start Guide



Features |

- 2.0-inch QVGA (240 x 320 pixel) full-color TFT display
- Play MP3, WMA, and WAV music files
- Playback music and videos (AVI and AMV files)
- View photos (JPEG, BMP) and e-book (.txt) files
- Recordable FM Radio with 30 station presets
- Built-in microphone and direct Line-In recording (for CD players, or other devices)
- Playlist Builder
- Karaoke-style synchronized lyrics display
- A-B repeat allows continuous replay of a designated section of a track
- Supports multi-languages including menus, song/album title, artist name and lyrics
- USB flash drive capabilities for data transfer and storage
- Adjustable sleep timer
- Eight equalizer effects, including a customizable USER EQ setting
- Power-saving screen savers and auto-shutoff function
- Internal rechargeable Li-Polymer battery provides over 42 hours of continuous music playback*
- Hi-Speed USB 2.0 port for easy computer connectivity and fast file transfers
- Real Time Clock (RTC) display

* Max. music playback time achieved with the following settings: Set Screen Saver to "Screen off", Backlight Time to "30 Seconds" and Lyrics Sync to "Off"

System Requirements |

Desktop or notebook computer with a working USB port.

One of the following operating systems:

- Windows® 8
- Windows® 7
- Windows Vista®
- Windows® XP
- Mac® OS X 10.0 or later
- Linux® Kernel 2.4 or later

Safety Precautions |

These usage and safety guidelines are **IMPORTANT!** Please read them carefully.

■ General Use

- Unpack the contents of the MP710 package carefully.
- Make sure that the USB connectors are the same size and shape before connecting – never force them.
- Always use the Transcend-provided power adapters and cables. Using incompatible cables may permanently damage your MP710.
- Never connect the MP710 to a USB hub. USB hubs connect to multiple devices at the same time, resulting in inadequate or unstable power supply. **This may cause damage to your digital music player.** Known problems caused by connecting to a USB hub include reduced playback time, random resets, and in the worst case, permanent damage to the player's firmware.
- Do not allow your MP710 to get wet or come in contact with water or any other liquids.
- Do not use a damp/wet cloth to wipe or clean the exterior case.
- Do not use or store your MP710 in any of the following environments:
 - Direct sunlight
 - Next to an air conditioner, electric heater or other heat sources
 - In a closed car that is in direct sunlight
- Always unplug the player once it is fully charged. Avoid charging the player for more than 12 hours.
- Do not charge in high-temperature environments or while exposed to direct sunlight.
- To maintain battery health, be sure to complete at least one full discharge/charge cycle per month.

■ Backing Up Data

- **Transcend does NOT take any responsibility for data loss, or damage during operation.** If you decide to store data on your MP710, we strongly advise that you regularly backup the data to a computer, or other storage medium.
- To ensure Hi-Speed USB 2.0 data transfer when connecting to a computer, please make sure the computer has the necessary USB drivers installed. If you are unsure how to check this, please consult your computer or motherboard User's Manual for USB driver information.

■ Caution: Risk of Deafness

- Repeated or regular use of headphones or earphones at volume levels above 80 decibels can give a false impression that the audio level is not high enough. Users may try to progressively increase the volume control therefore risking a dangerous noise level for their ears.
- To protect your health and your hearing, keep the volume of your MP3 player below 80 decibels and do not use for an extended period of time. Stop use if symptoms like headaches, nausea, or hearing disorders occur.










- Your MP3 player is limited to a volume level of 100 decibels.
- Both the MP3 player and its accompanying earphones are compliant with the French regulation concerning portable music devices (24th July 1998 Order).
- Before using other earphones, confirm that their technical specifications are compatible with the original set.

■ Reminders

 
- Never use the “Quick Format” or “Full Format” functions in Windows® to format your MP710.
- If you leave the digital music player plugged into a notebook computer that is running on battery power, the player will gradually drain power from your notebook’s battery.
- Follow the procedures in the “Disconnecting from a Computer” section to properly remove your MP710 from a computer.
- Transcend occasionally releases firmware updates for certain products. We suggest you visit <http://www.transcend-info.com> and download the latest firmware version for your device.

MP710 Controls |



A	2.0" Full-Color TFT Display	
B	Microphone	
C		Option Button
D		Reset Switch
E		Back Button
F		Next/Fast Forward
G		Volume Down
H		Volume Up
I		Power/Play/OK Button
J		Previous/Rewind
K		Headphone Jack
L	Hi-Speed Micro USB 2.0 Port	
M	Line-In Port	
N	Lanyard Attachment Hole	

Music Playback Screen |

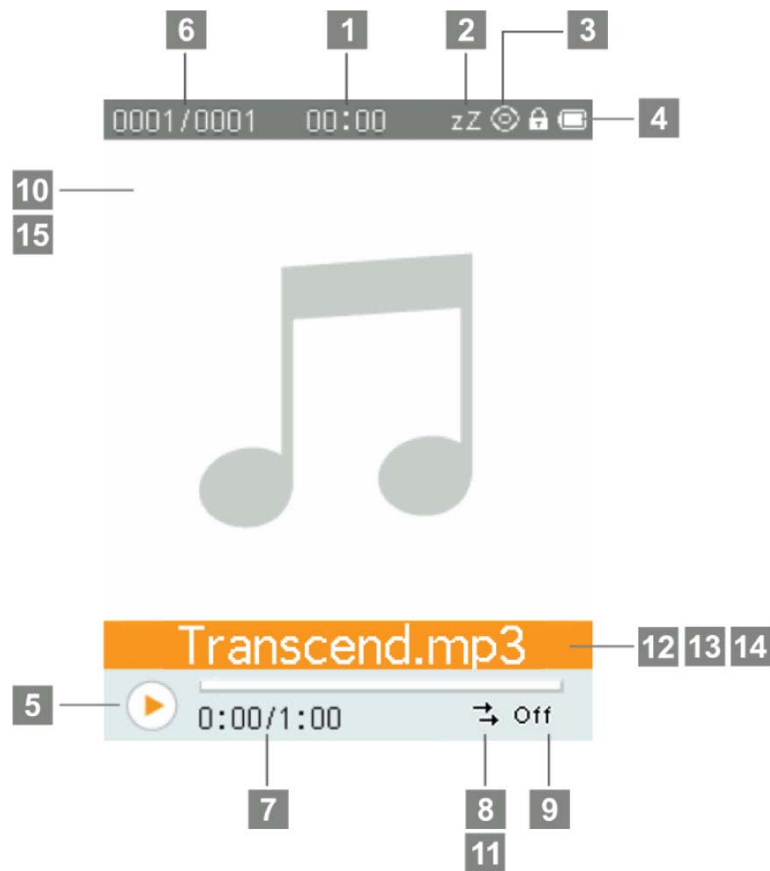

	ICON	INDICATION
1	Time	Displays current time (RTC)
2	Sleep	Sleep Timer is enabled
3	Auto Power Off	Auto Power Off function is enabled
4	Battery	Battery power level
5	Play Status	▶ (Play), ⏸ (Pause), ⏩ (Fast Forward), ⏪ (Rewind), or ◻ (Stop) status
6	Track Info	Current track number and total number of tracks available
7	Track Time & Progress bar	The total length (play time) of the file and current position
8	Repeat Modes	Normal, Repeat One, Repeat All, Shuffle
9	EQ Mode	Normal, Rock, Funk, Hip hop, Jazz, Classical, Techno, User EQ
10	Song Lyrics	Text lyrics are available for the current song
11	A-B Repeat	A – (start segment), –B (end segment), A–B (segment repeat)
12	Artist	Artist/singer of the current song
13	Album	The title of the album the current song comes from
14	Filename/Title	The current file name and song title
15	Cover Art	Displays an image of the album cover (if available)


Basic Operation |

■ Charging the Battery


Plug the small end of the USB cable into the Micro USB port on the bottom of the MP710, and plug the large end of the cable into an available USB port on your desktop or notebook computer. The MP710's internal Li-Polymer battery will automatically begin charging. A battery charging indicator will appear in the upper right hand corner of the player's screen. Leave the player plugged in until the battery charging animation stops.



 NEVER plug the MP710 into a USB hub or an external USB port located on a keyboard, monitor or other peripheral. This can permanently damage your digital music player. When charging the battery, Please plug the MP710 directly into your computer's built-in USB port.

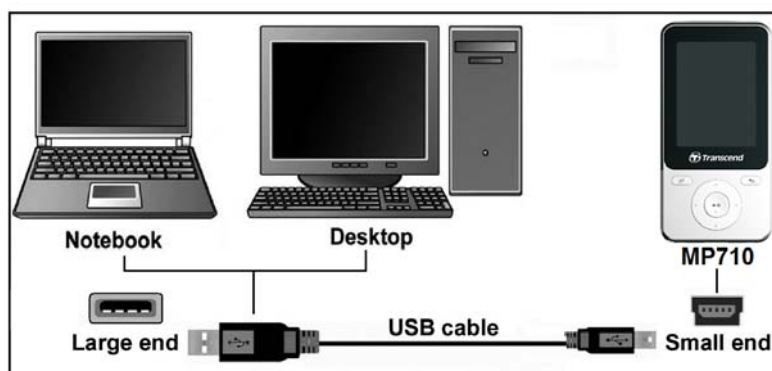

■ Power ON

Press and hold the  button to turn on the player. An animated logo will appear, followed by the player status information. After the startup sequence, the Main Menu will be displayed, indicating the MP710 is ready for use.




- o *It takes a few seconds for the MP710 to power up.*

■ Power OFF


Press and hold the  button to turn off the MP710.

- o *It takes a few seconds for the MP710 to completely power down.*

■ Play a Song

Press the  button to play a selected music, video, photo, E-book, or recording file.


■ Pause a Song

Press  to pause and un-pause a song, recording, or video during playback.

■ Next Track

Press  to skip to the next available song.

■ Previous Track

Press  to go back to the previous song.

■ Fast Forward

Press and hold the  button to fast-forward.

■ Fast Rewind

Press and hold the  button to rewind.


■ Increase Volume

Press once or press and hold the  button until you reach the desired volume level.

■ Decrease Volume

Press once or press and hold the  button until you reach the desired volume level.

■ Main Menu

 
Press and hold  in any mode to enter the Main Menu. The Main Menu gives you access to the MUSIC, RECORD, RADIO, PHOTO, VIDEO, FITNESS, and FILE BROWSER modes, and the SETTINGS menu.



■ File Browser

The File Browser is a fast and convenient way of moving between tracks, files and folders.

1. Choose **FILE BROWSER** from the Main Menu or in **MUSIC, VIDEO, PHOTO,** or **E-BOOKS** modes to open the File Browser.
2. Once the source device is chosen, a list of available files for the current mode will be shown (except in FILE BROWSER mode, which displays all files).

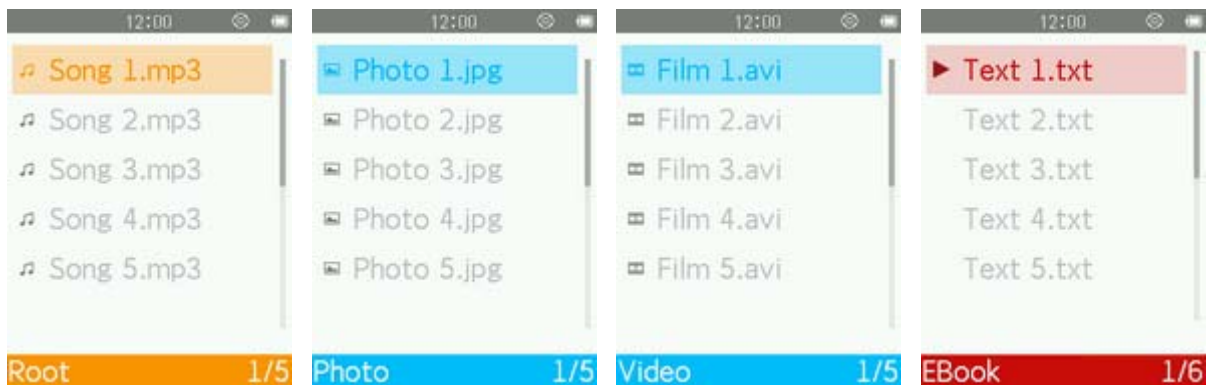

3. Use the / buttons to move up and down the list of files.
4. Highlight the file you want to play and press .
5. To enter a folder or subfolder, highlight it and press either or .
6. To exit a folder, press or .

■ Reset



If the MP710 is not functioning properly, you can shutdown by pressing ^{RESET} for 3 to 5 seconds.

■ Lock













When the lock function is enabled, all of the MP710's buttons will be disabled, and cannot accidentally be pressed while in your pocket or bag. Press and hold to turn lock on. The **LOCK** icon () will displayed. Press and hold again to turn unlock.


MUSIC Mode |


■ Playing Audio Files


1. Press and hold  to power ON the unit. The Main Menu will appear.
 - ❖ If the MP710 is already on, press and hold the  button to enter the Main Menu.



 2. Use the  /  /  /  buttons to select “**Music**” mode and press .
3. Use the  /  buttons to select the source location of the song (“**Local Folder**” or “**All Music**”) you want to play and press . (Alternatively, you can find all files in the FILE BROWSER mode)
4. Navigate to the file you want to play by using the  /  and  /  buttons.

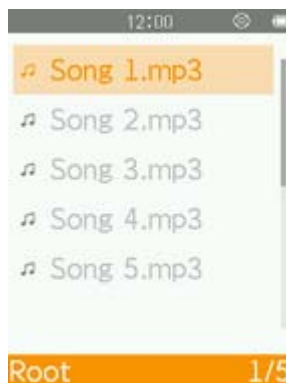

 5. Press  to begin listening to a music file.

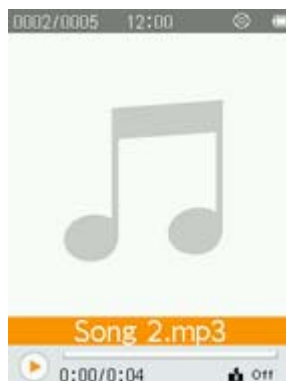


- o Please see the Specifications section for a list of all music file formats the MP710 supports.
- o If the music player cannot find any compatible files, a “EMPTY DISK” message will be displayed.





 
■ Adjusting the Volume

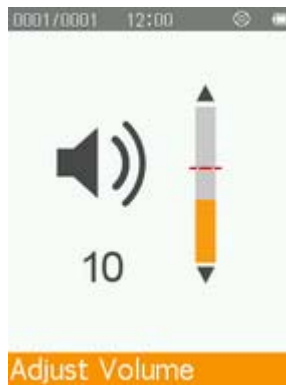 
While playing a song, press once or press and hold  or  until you reach the desired volume level.






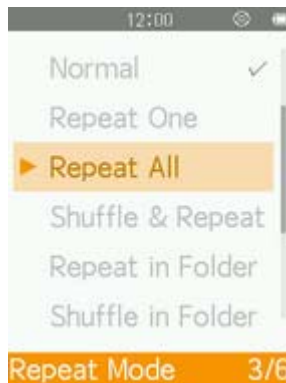 
■ Repeat Mode

1. While playing a song in the MUSIC mode, press the  button to open the Options menu.

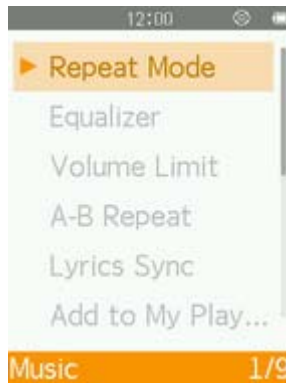2. Use the  /  buttons to select "Repeat Mode" and press .



3. Use the  /  buttons to select a repeat mode and press  to confirm.







 
I. Repeat:



- Normal** (plays all music files available one time, in consecutive order)
- Repeat One** (continuously repeats the current song)
- Repeat All** (continuously repeats playback of all music files available, in consecutive order)
- Shuffle & Repeat** (continuously repeats playback of all files available, in random order)
- Repeat in Folder** (continuously repeats playback of all files in folder, in consecutive order)
- Shuffle in Folder** (continuously repeats playback of all files in folder, in random order)

■ Equalizer (EQ) Mode

There are many preset Equalizer Modes to choose from: Normal (Off), Rock, Funk, Hip Hop, Jazz, Classical, Techno, User EQ.

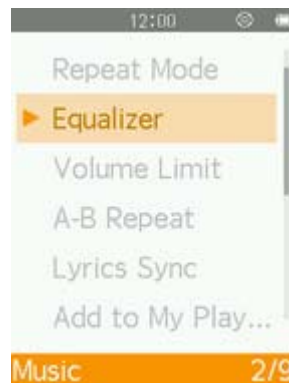1. While playing a song in the MUSIC mode, press the  button to open the Options menu.
2. Use the  /  buttons to select “**Equalizer**” and press .








3. Use the  /  buttons to select an equalizer mode. If music is playing, you will instantly hear the difference between each mode through the earphones.

 





4. Press  to confirm the new EQ setting.


■ User EQ Customization:


The User EQ allows you to customize a 5-band equalizer to your personal preference.

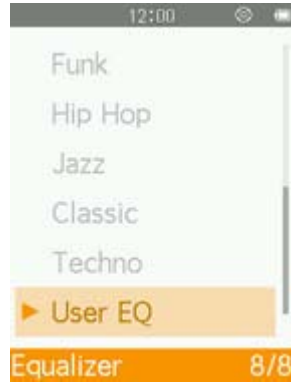 1. While playing a song in the MUSIC mode, press the  button to open the Options menu.
2. Use the  /  buttons to select “**Equalizer**” and press .
3. Select “**User EQ**” and press .



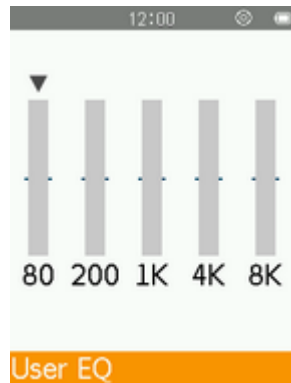


4. Press  to switch between five bands: 80Hz, 200Hz, 1KHz, 4KHz, and 8KHz.
5. Press  /  to increase or decrease levels of each frequency range.



6. Press  to confirm and return to the “Equalizer” menu.


■ A-B Repeat

 
1. While playing a song in the MUSIC mode, press the  button to open the Options menu.
2. Select “A-B Repeat” and press  to enable this function.

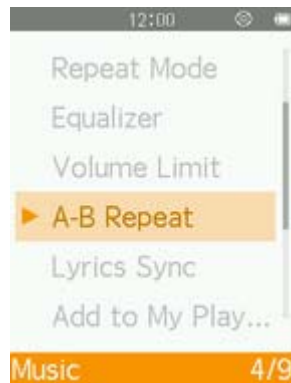

3. Press the  button to mark the beginning of the section you want to repeat.



 
4. Press the  button again to mark the end of the section you want to repeat.

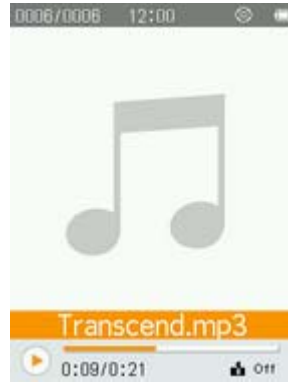





5. The marked section of the song will playback in a continuous loop.

 




6. Press the  button once more to stop the A-B repeat function.


■ Volume Limit

This function lets you enable/disable the volume limit and set a maximum limit level to prevent the volume from exceeding a certain value.

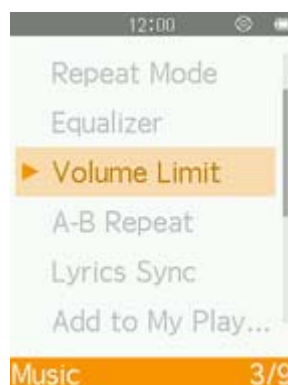 1. While playing a song in the MUSIC mode, press the  button to open the Options menu.
2. Use the  /  buttons to select "Volume Limit" and press .





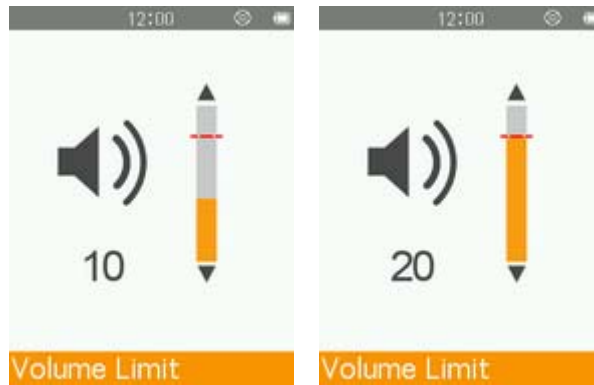




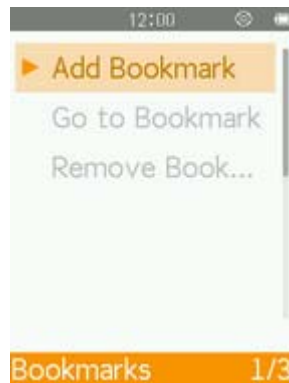 
3. Press  /  to increase or decrease levels of maximum volume.



■ Add Bookmark

This function can be used to mark a specific part of song so you can easily return to it in the future.

1. While playing a song in the MUSIC mode, press the  button to open the Options menu.
2. Use the  /  buttons to select “**Bookmarks**” and press .
3. Use the  /  buttons to select “**Add Bookmark**” and press .



 
4. Press the  button to bookmark the current position of the song.

■ Add to My Playlist

 
The MP710 includes three built-in playlists that can be used to sort your favorite songs into different groups.


Ex: you may choose to add “dance music” to My Playlist 1, and “love songs” to My Playlist 2.

1. In the MUSIC mode, press the  button to open the Options menu.
2. Use the  /  buttons to select “**Add to My Playlist**” and press .

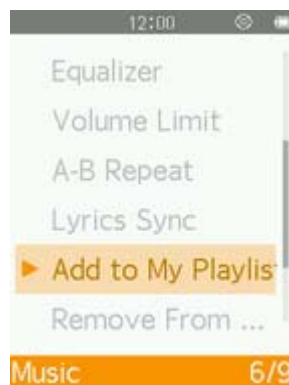

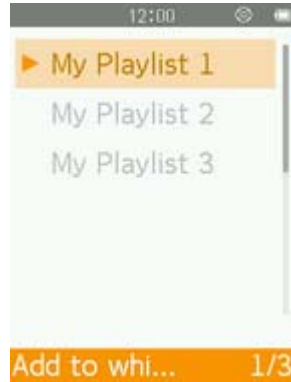

 
3. Select the playlist you want to add the song to. (My Playlist 1” ~ “My Playlist 3”)




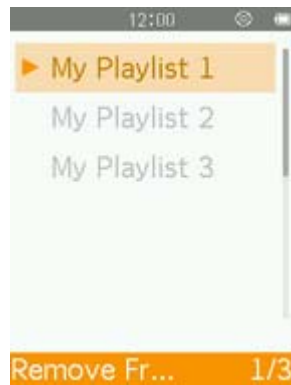 
4. Press the  button to add the currently playing song to the highlighted playlist.




■ Removing a Song from My Playlist

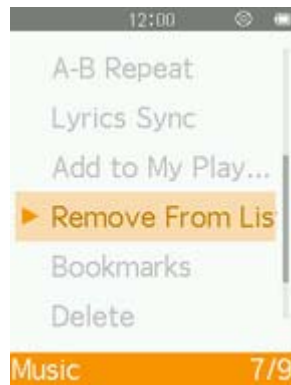1. In the MUSIC mode, press the  button to open the Options menu.
2. Use the  /  buttons to select "Remove From List" and press .




3. Select the playlist you want to edit and press .



4. Use the  /  buttons to select "Yes" and press  to remove the song (**note:** this will only remove the selected song from the current playlist, and will not actually delete the file from the internal memory).



5. Press  to return to My Playlist.




■ Lyrics Sync

 
This function displays synchronized lyrics (if available) on the screen during music playback.

Note: For Lyrics Sync to work, an “xxxxx.lrc” lyrics file with the exact same name as its corresponding music file must be transferred to the MP710.

 
Ex: for the MP3 file “GM-Last_Christmas.mp3”, the LRC lyrics file must be named “GM-Last_Christmas.lrc”

1. In the MUSIC mode, press the  button to open the Options menu.

2. Use the  /  buttons to select “Lyrics Sync” and press .

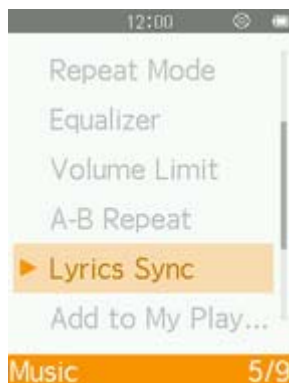

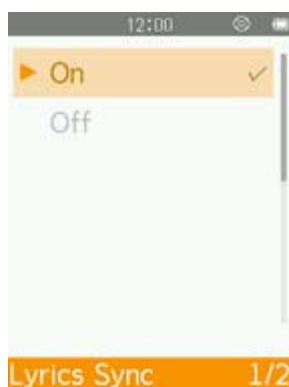


3. Select “On” to use Lyrics Sync, or “Off” to turn the function off.

 


4. Press  to confirm.

■ Delete

1. While playing a song in the MUSIC mode, press the  button to open the Options menu.

2. Use the  /  buttons to highlight “Delete” and press . A “Confirm File Delete” message will appear.

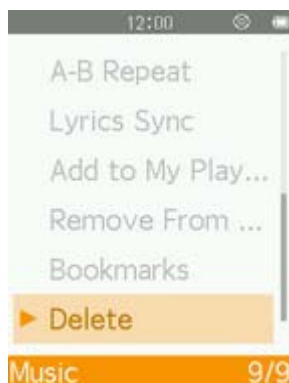






 
3. Use the ▲ / ▼ buttons to highlight **“Yes”** and press ▶️ to permanently delete the currently playing file, or select **“No”** to return to the Options menu without deleting.



FITNESS Mode |

■ Fitness Menu

 
1. Press the  button to enter the Main Menu.
2. Use the  /  /  /  buttons to select “**Fitness**” mode and press .



3. The **FITNESS** menu will be displayed.

■ Enter Fitness Mode


1. In the **FITNESS** menu, use  /  to select “**START**” and press .

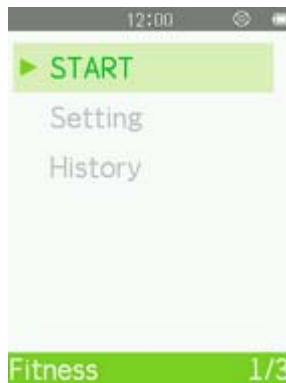

2. To exit Fitness Mode and save your fitness data, press .


■ Fitness Setting

 - In the **FITNESS** menu, use  /  to select “**Setting**” and press .

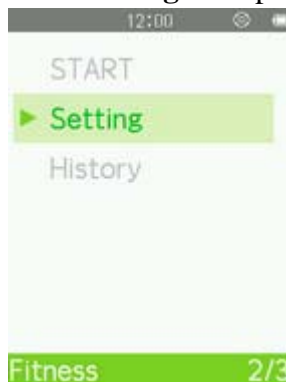


■ Body Information Settings

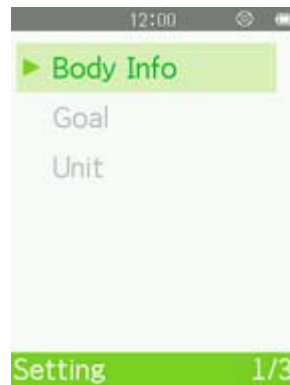 


In the **FITNESS SETTING** menu, use  /  to select **“Body Info”** and press .



 ■ Enter Gender

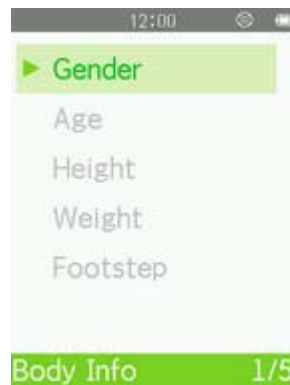1. In the **Body Info** menu, use  /  to select **“Gender”** and press .








2. Use  /  to select your gender and press .

■ Enter Age

1. In the **Body Info** menu, use  /  to select **“Age”** and press .



2. Use  /  to select each field. Adjust the values of each field with the  /  buttons and press .

■ Enter Height

1. In the **Body Info** menu, use  /  to select **“Height”** and press .



2. Use ◀ / ▶ to select each field. Adjust the values of each field with the ▲ / ▼ buttons and press ▶▶.

■ Enter Weight

 
1. In the **Body Info** menu, use ▲ / ▼ to select “**Weight**” and press ▶▶.



2. Use ◀ / ▶ to select each field. Adjust the values of each field with the ▲ / ▼ buttons and press ▶▶.

■ Enter Footstep

1. In the **Body Info** menu, use ▲ / ▼ to select “**Footstep**” and press ▶▶.

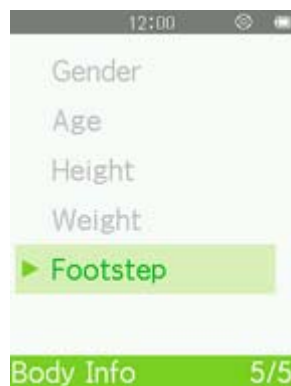


2. Use ◀ / ▶ to select each field. Adjust the values of each field with the ▲ / ▼ buttons and press ▶▶.

■ Sport Goal Setting

The MP710 can set five types of goals. (Normal, Step, Distance, Calorie, Timer).

 
In the **FITNESS SETTING** menu, use ▲ / ▼ to select “**Goal**” and press ▶▶.

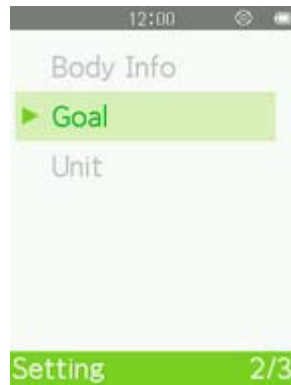

■ Goal: Normal

“Normal” lets you track your workout without presetting any specific goal.

 
In the **Goal** menu, use / to select “**Normal**” and press .

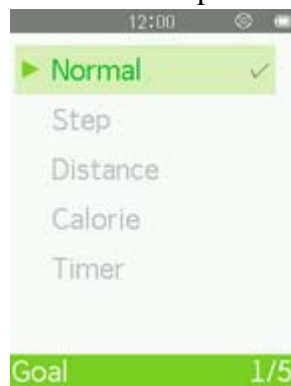

■ Goal: Step

“Step” lets you preset the total number of steps you want to complete in your workout. The estimated distance of your normal footsteps can be set in “Footstep” in the Body Info menu. When the target is reached, a confirm message will displayed.

 1. In the **Goal** menu, use / to select “**Step**” and press .

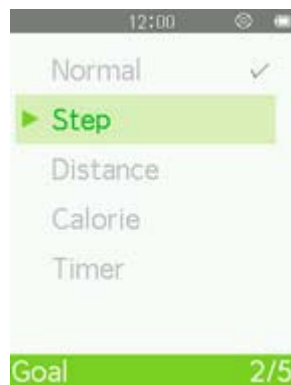


2. Use / to select each field. Adjust the values of each field with the / buttons and press .

■ Goal: Distance

“Distance” lets you preset the total distance you want to complete in your workout. When the target is reached, a confirmation message will be displayed.

 1. In the **Goal** menu, use / to select “**Distance**” and press .

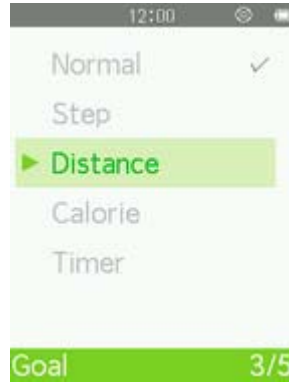


2. Use ◀ / ▶ to select each field. Adjust the values of each field with the ▲ / ▼ buttons and press ▶▶.

■ Goal: Calorie

“Calorie” lets you preset the total number of calories you want to burn in your workout. When the target is reached, a confirmation message will be displayed.

 1. In the **Goal** menu, use ▲ / ▼ to select “**Calorie**” and press ▶▶.

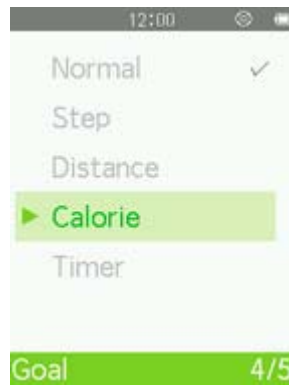


2. Use ◀ / ▶ to select each field. Adjust the values of each field with the ▲ / ▼ buttons and press ▶▶.

■ Goal: Timer

“Timer” lets you preset the total time of your workout. When the time has elapsed, a confirmation message will be displayed.

 
1. In the **Goal** menu, use ▲ / ▼ to select “**Timer**” and press ▶▶.

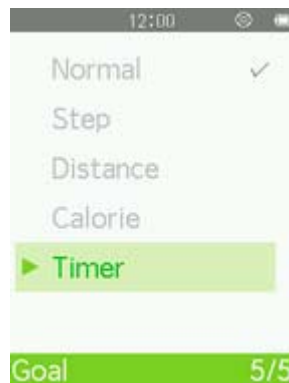




2. Use ◀ / ▶ to select each field. Adjust the values of each field with the ▲ / ▼ buttons and press ▶▶.

 ■ Unit Setting

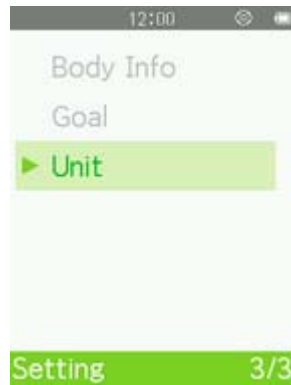1. In the **FITNESS SETTING** menu, use ▲ / ▼ to select “**Unit**” and press ▶▶.

 




2. Use  /  to select your measurement setting and press .

■ History


The MP710 records the time and goal of every exercise session. To review MP710 records:

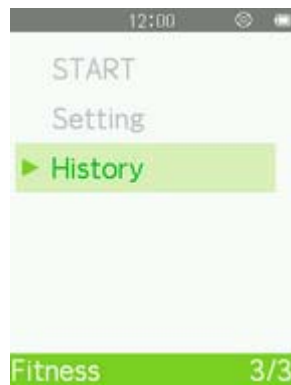
1. In the **FITNESS** menu, use  /  to select “**History**” and press .



2. Use the  /  buttons to move up and down the list of files.



 3. Select the file you want to review and press .

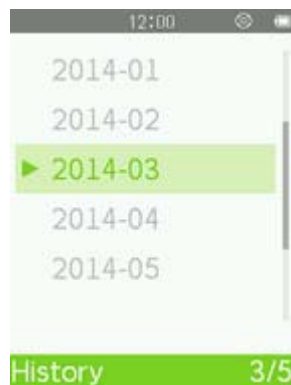






 
4. Use ◀ / ▶ to switch to the previous/next record.



RECORD Mode |




Record menu

 
1. Press the  button to enter the Main Menu.
2. Use the  /  /  /  buttons to select “Record” mode and press .



 
- o All recordings can be accessed in FILE BROWSER mode or by using the File Browser in MUSIC mode

Voice Recording

1. Use the  /  buttons to select “Start Voice Recording” and press .
2. An automatically generated file name for your recording will appear on the screen.

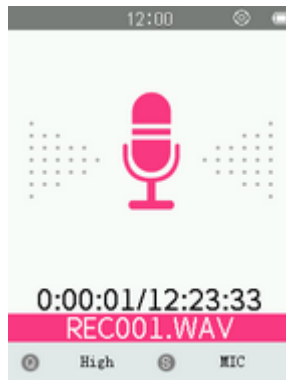

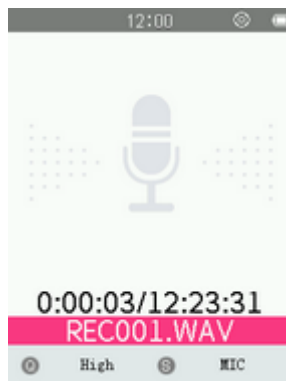


3. Press  to pause the recording, and press  again to resume.






4. Press the  button. A “Stop recording?” message will appear.

 


5. Use the  /  buttons to highlight “Yes” and press  to finish the recording.
 - o Voice recordings are named and numbered in this format: “REC###.WAV”
Ex: REC003.WAV represents the third voice recording
 - o Voice recordings are saved in the **INTERNAL MEMORY/RECORD**
 - o For best results, try to position the MP710’s Microphone as close as possible to the source of the sound or voice you are recording.

 
■ Line-in Recording

To adjust the Record Source, please see the “**Set Record Source**” section of this manual.

1. After setting the Record Source, use the  /  buttons to select “**Start Voice Recording**” and press .
2. An automatically generated file name for your recording will appear on the screen.

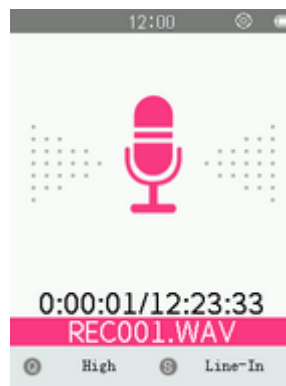

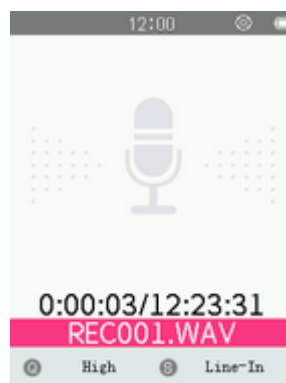


3. Press  to pause the recording, and press  again to resume.



4. Press the  button. A “**Stop recording**” message will appear.






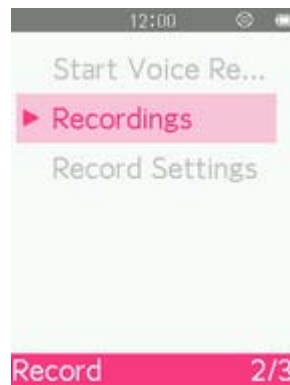 
5. Use the  /  buttons to highlight “Yes” and press  to finish the recording.
 - o Line-In recordings are named and numbered in this format: “REC###.WAV”
Ex: REC003.WAV represents the third Line-In recording
 - o Line-In recordings are saved in the **INTERNAL MEMORY/RECORD**

■ Recording the Radio

 
Please see the “Recording the Radio” section in the **RADIO** mode for detailed instructions.




■ Recordings

1. Use the  /  buttons to select “Recordings” and press .

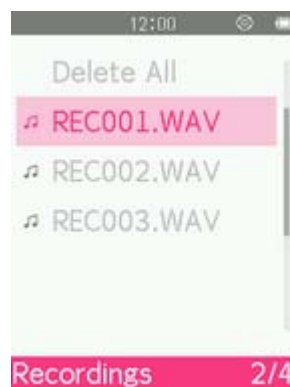

2. Use the  /  buttons to select the source location of the recording file you want to play and press .




3. Use the  /  buttons to select the recording file you want to play and press .

■ Record Settings

■ Set Record Quality


1. Use the ▲ / ▼ buttons to select “Record Quality” and press ▶||.

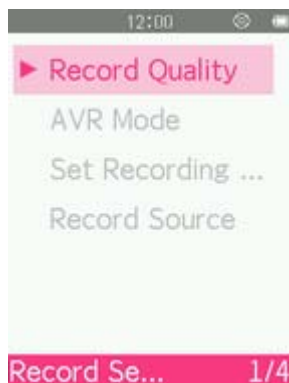 

2. Use the ▲ / ▼ buttons to select the quality and press ▶||.

■ Track AVR (Automatic voice record) Mode


1. Use the ▲ / ▼ buttons to select “AVR Mode” and press ▶||.

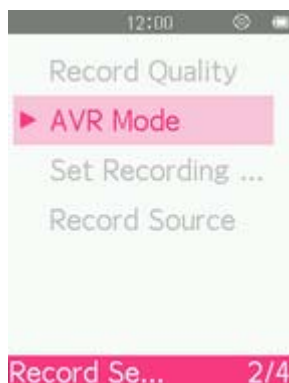 

2. Use the ▲ / ▼ buttons to select “Normal” or “AVR Mode” and press ▶||.

■ Set Record Source


1. Use the ▲ / ▼ buttons to select “Record Source” and press ▶||.

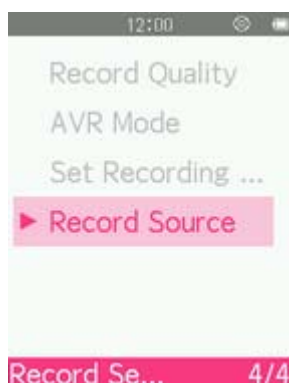 

2. Use the ▲ / ▼ buttons to select the record source and press ▶||.

■ Set Record Scene


1. Use the ▲ / ▼ buttons to select “Set Record Scene” and press ▶||.

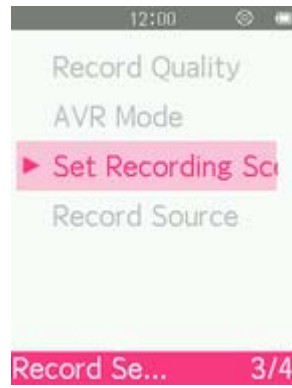 







2. Use the ▲ / ▼ buttons to select the record scene and press ▶.

RADIO Mode |

■ Listen to the Radio




1. Plug in the earphones . (Earphones must be plugged-in to listen to the Radio).






2. Press and hold the  button to enter the Main Menu.
3. Use the  /  /  /  buttons to select “Radio” and press .

 


■ Station List

1. Use the  /  buttons to select “Station List” and press .



2. MP710 will automatically scan all frequencies and save the first 30 available stations as channel presets (CH01 to CH30).
3. Use the  /  buttons to select the channel number and press  to listen to the selected channel.

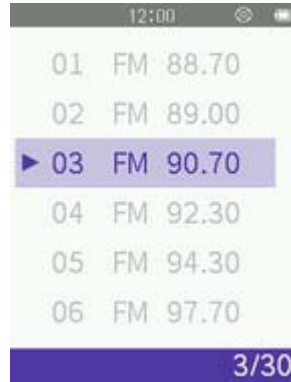


Manual Tune


1. Use the ◀ / ▶ buttons to select “Manual Tune” and press ▶▶.



 2. The current FM Radio frequency will be displayed.

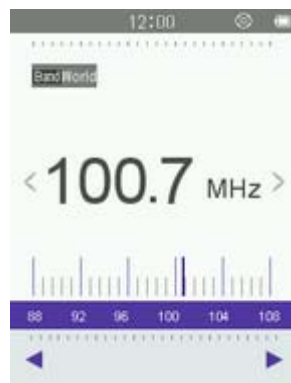

 3. Press ◀ or ▶ (the FM frequency will increase or decrease in 0.1MHz increments) until you reach the desired station. Alternatively, you can press and hold either ◀ or ▶ to auto-scan for the next available station.

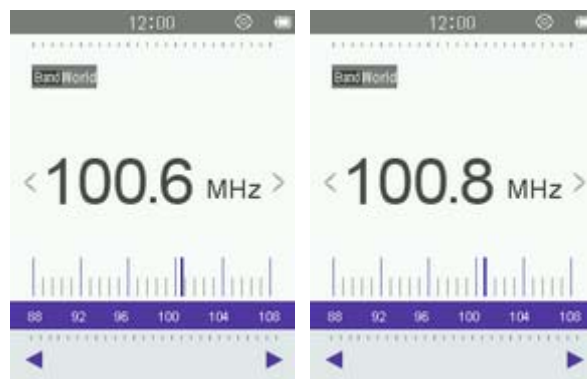


Note: If you have already saved your favorite stations to the Station List, you can press ▶▶ to quickly switch

 between your saved stations.





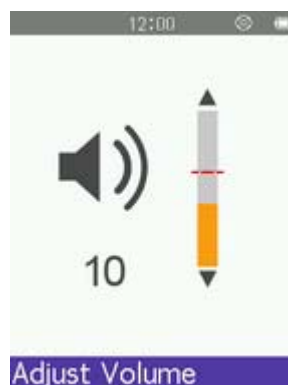


■ Adjusting the Volume



 Press once or press and hold  or  until you reach the desired volume level.





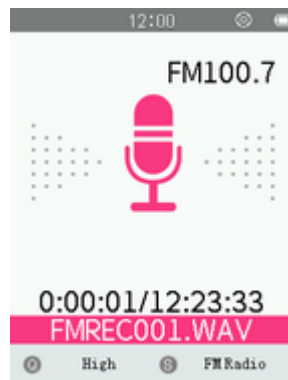

■ Recording the Radio

1. Select a radio station that you want to record.
2. Press  to open the Options menu.
3. Use the  /  buttons to select “**FM Record**” and press .
4. An automatically generated file name for your recording, along with the current record quality, FM frequency will appear.



- o *FM Recordings are named and numbered in this format: “**FMREC###.WAV**”*
Ex: “FMREC012.WAV” would be the twelfth FM recording
 - o *FM recordings are saved in the **Internal Memory/RECORD***
5. Press  to pause the recording, and press  again to resume.



6. Press the  button. A **“Stop Recording”** message will appear.
7. Use the  /  buttons to highlight **“Yes”** and press  to save the recording and return to the RADIO mode.







■ Saving a Radio Station

The MP710 lets you save your 30 favorite radio stations (CH01 to CH30).

To save a station:

 
1. Use  or  to select the radio station (FM frequency) that you want to save.



2. Press the  button to open the Options menu.
3. Use the  /  buttons to select **“Save Station”** and press  to bring up the saved channel list.



- Use the / buttons to select your desired channel number, and press again to save the current radio station to that channel.

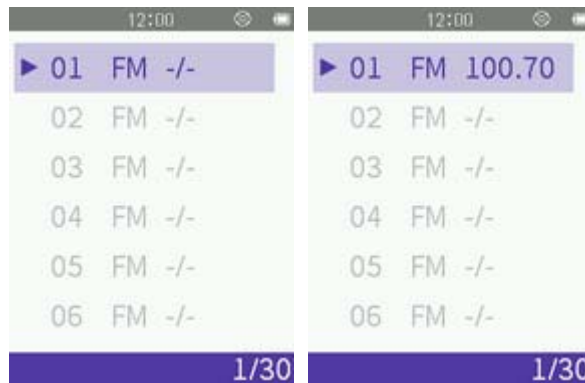

■ Delete Channel





- Press the button to open the Options menu.
- Use the / buttons to select “Delete Channel” and press to bring up the saved channel list.

 





- Use the / buttons to select the desired channel number, and press again to delete the current radio station from that channel.



■ Clear All Presets

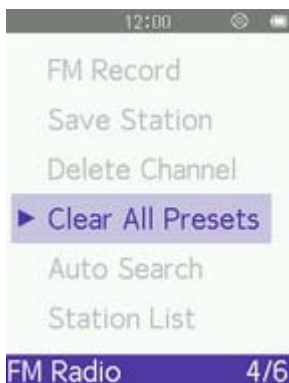



1. Press the  button to open the Options menu.
2. Use the  /  buttons to select “**Clear All Presets**” and press  to bring up the saved channel list.




 3. Use the  /  buttons to highlight “**Yes**” and press  to permanently delete the all channel list, or select “**No**” to return to the Options menu without deleting.



■ Auto Search

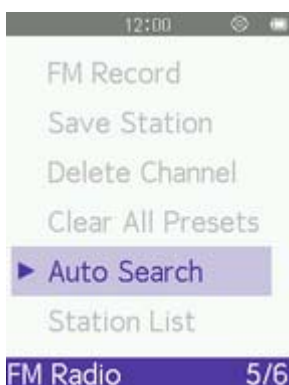 


1. Press  to open the Options menu.
2. Use the  /  buttons to select “**Auto Search**” and press . All FM channels will be automatically scanned and the first 30 available stations will be saved.





- *The previously-saved channels in the station list will be reset first when using this function.*

 
■ Recalling a Saved Station


1. Press  to open the Options menu.

- Use the  /  buttons to select “**Station List**” and press  to display your saved stations (CH01 to CH30).



- Use the  /  buttons to select a channel number.

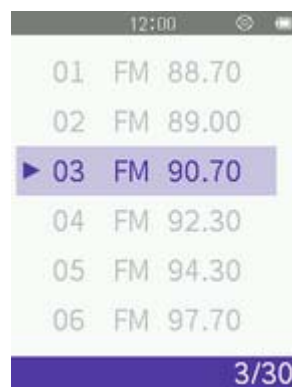









- Press  to listen to the selected channel.



FM Band

The MP710 allows you choose **World FM Band** (87.5MHz~108.0MHz) or **Japan FM Band** (76.0MHz~90.0MHz).

- Use the  /  /  /  buttons to select “**Radio**” mode and press .
- Use the  /  buttons to select “**FM Band**” and press .



3. Select **“World FM Band”** or **“Japan FM Band,”** then press  to confirm.

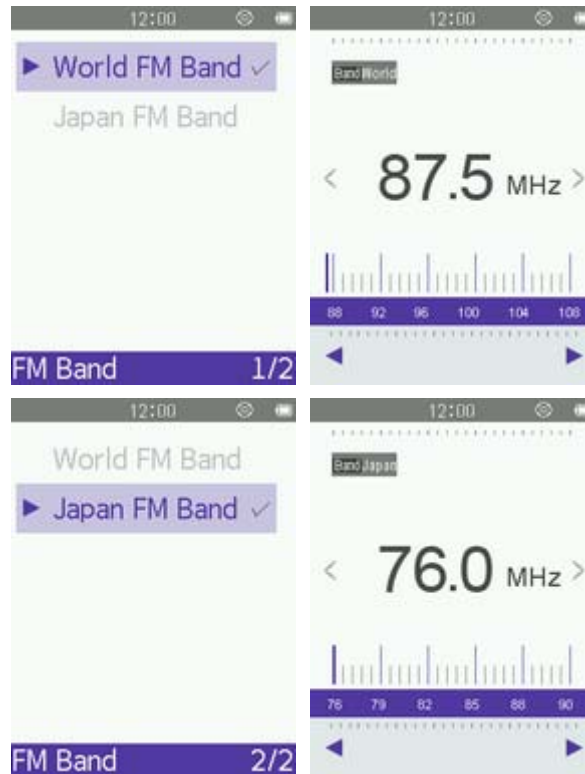










 


PHOTO Mode |



■ Displaying Photos

1. Press and hold the  button to enter the Main Menu.
2. Use the  /  /  /  buttons to select **"Photo"** and press .







3. The thumbnail photos will be displayed. Use the  /  /  /  buttons to select the photo you want to view and press . (Alternatively, you can find all files in the FILE BROWSER)

 





4. Press  to go to the next available photo, and press  to go back to the previously viewed photo.





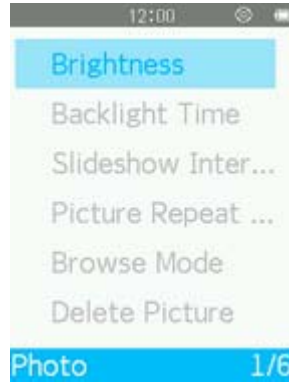

■ Brightness

 
1. When viewing an image in the PHOTO mode, press the  button to open the Options menu.
2. Use the  /  buttons to select **"Brightness"** and press .






- Use the  /  buttons to select the desired brightness level and press .

■ Backlight Timer

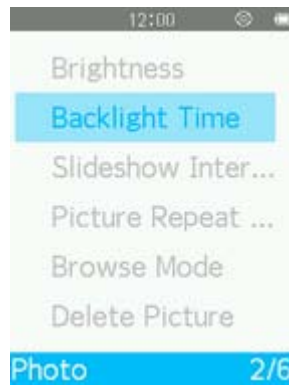



- When viewing an image in the PHOTO mode, press the  button to open the Options menu.
- Use the  /  buttons to select “**Backlight Time**” and press .

 





- Use the  /  buttons to select the desired interval time and press .

■ Slideshow Interval

This option adjusts the amount of time in between each picture displayed when viewing slideshows.

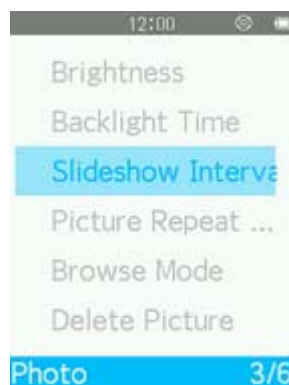- When viewing an image in the PHOTO mode, press the  button to open the Options menu.
- Use the  /  buttons to select “**Slideshow Interval**” and press .







 
- Use the  /  buttons to select the desired interval time, press  to confirm. (Adjustment range: 2sec ~ 30sec).




- o **Note:** Large image files sometimes take a while to decode before they are displayed. If the decoding time takes longer than the slideshow interval, the photo will be displayed immediately after it is decoded.

■ Picture Repeat Mode



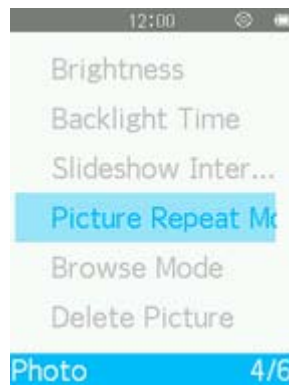

 1. While viewing an image in the PHOTO mode, press the  button to open the Options menu.
2. Use the  /  buttons to select “Picture Repeat Mode” and press .

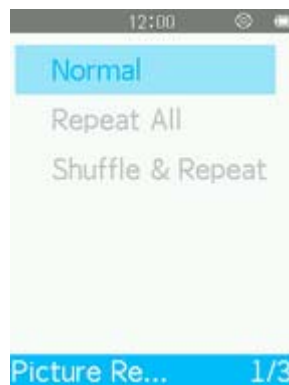





3. Use the  /  buttons to select “Normal”, “Repeat All” or “Shuffle & Repeat” and press , then MP710 will start slideshow immediately.




 ■ Browse Mode

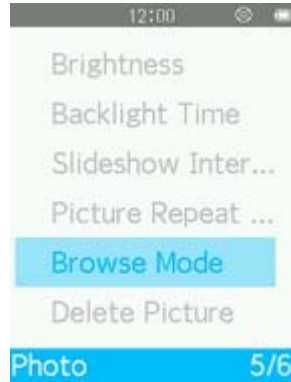



 1. While viewing an image in the PHOTO mode, press the  button to open the Options menu.
2. Use the  /  buttons to select “Browse Mode” and press .

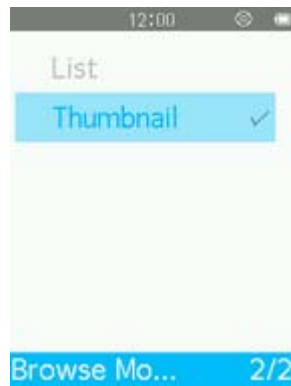





- Use the  /  buttons to select a file display mode (“List” or “Thumbnail”) you want to use and press .




 ■ Delete

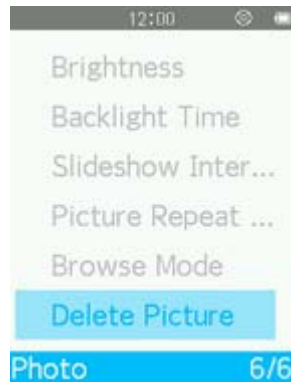 - When viewing an image in the PHOTO mode, press the  button to open the Options menu.
- Use the  /  buttons to select “Delete Picture” and press . A “Confirm File Delete” message will appear.





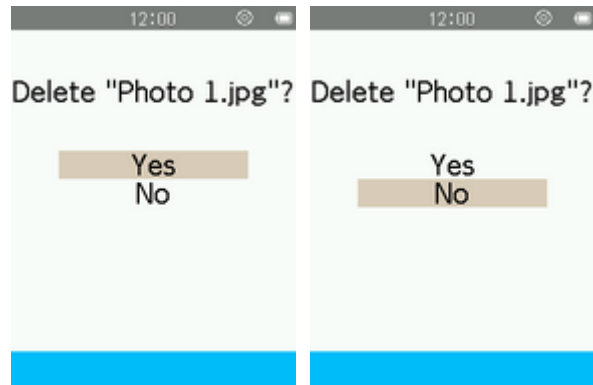



- Use the  /  buttons to highlight “Yes” and press  to permanently delete the currently displayed picture, or select “No” to return to the Options menu without deleting.












VIDEO Mode |



■ Playing Video Files

 1. Press and hold the  button to enter the Main Menu.
2. Use the  /  /  /  buttons to select "Video" and press .



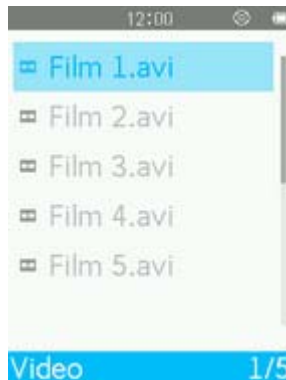



3. Use the  /  buttons to select the source location of the video you want to play and press . (Alternatively, you can find all files in the FILE BROWSER mode)
4. Navigate to the file you want to play by using the  /  and  /  buttons and press .



5. Press  to pause the video, and press  again to resume.



- o In order to maximize the screen's resolution, video playback is displayed horizontally.
- o The  /  /  /  directional controls will be adjusted to function horizontally.



 
6. During video playback press to go to the next available video, and press to go back.
7. To fast forward, press and hold . To rewind, press and hold .
8. To adjust the volume, press / .



- o The MP710 only supports video files encoded in AMV /AVI video format.

■ Brightness


1. When viewing a file in the Video mode, press the button to open the Options menu.
2. Use the / buttons to select “**Brightness**” and press .

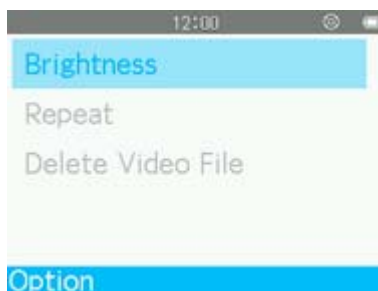

3. Use the / buttons to select the desired brightness level and press .

■ Repeat Mode

 1. When viewing a file in the Video mode, press the button to open the Options menu.
2. Use the / buttons to select “**Repeat**” and press .

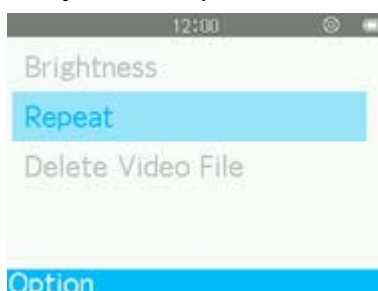

3. Use the ◀ / ▶ buttons to select mode and press ▶▶.

Repeat:

Normal (plays all video files available one time, in consecutive order)

 
Repeat One (continuously repeats the current video)

Repeat All (continuously repeats playback of all video files available, in consecutive order)

 
Delete

1. While viewing a file in the VIDEO mode, press the ⏏ button to open the Options menu.

2. Use the ◀ / ▶ buttons to select **"Delete Video File"** and press ▶▶. A **"Confirm File Delete"** message will appear.

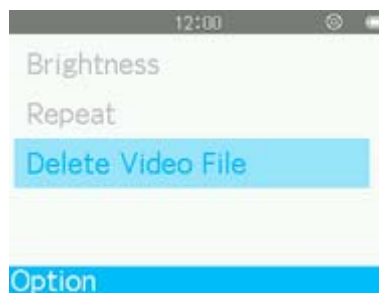



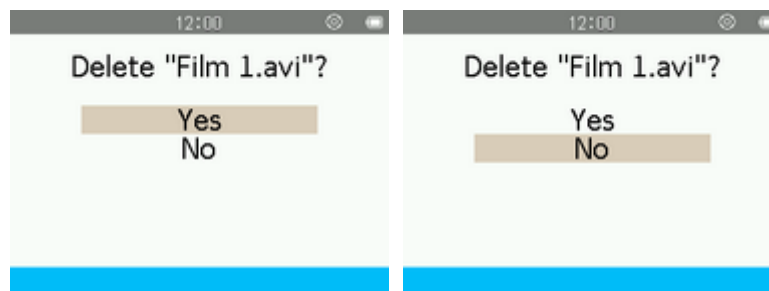



3. Use the ◀ / ▶ buttons to highlight **"Yes"** and press ▶▶ to permanently delete the currently played video, or select **"No"** to return to the Options menu without deleting.




TOOL Mode |

■ Tool Menu

 
1. Press and hold the  button to enter the Main Menu.
2. Use the  /  /  /  buttons to select “**Tool**” and press .



3. To exit the **TOOL** menu, press the  button.


■ Schedule FM Recording

Use the  /  buttons to select “**Schedule FM Recording**” and press .

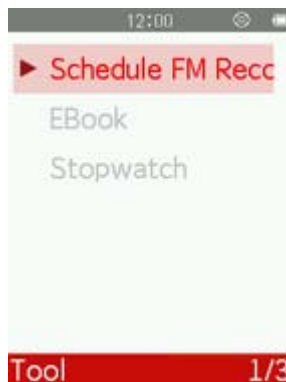

■ Switch

 1. In the Schedule FM Recording menu, use the  /  buttons to select “**Switch**” and press .

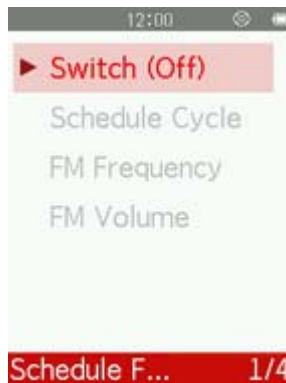

2. Use the  /  buttons to select “**On**” and press , or select “**Off**” to return to the menu without turning on Schedule FM Recording.

3. If you select “On”, use ◀ / ▶ to move between Hour, Minute and AM/PM, and adjust the values of each field with the ▲ / ▼ buttons, and press ▶▶ to set “**Start Time**” of Schedule FM Recording.



 
4. After setting “**Start Time**”, use ◀ / ▶ to move between Hour, Minute, and adjust the values of each field with the ▲ / ▼ buttons, and press ▶▶ to set “**Recording Time**” of Schedule FM Recording.



5. After setting “**Recording Time**”, Schedule FM Recording is turned on, and you will return to the menu which displays the current setting status.

■ Schedule Cycle

1. In the **Schedule FM Recording** menu, use the ▲ / ▼ buttons to select “**Schedule cycle**” and press ▶▶.

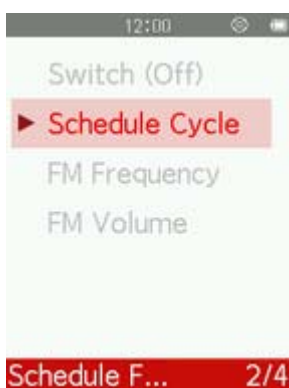

2. Use the ▲ / ▼ buttons to select “**Once**”, “**Daily**” or “**Work day**” and press ▶▶.
- | | |
|-----------------|------------------|
| Once | Only record once |
| Daily | Record every day |
| Work day | Monday to Friday |

■ FM Frequency

1. In the **Schedule FM Recording** menu, use the ▲ / ▼ buttons to select “**FM Frequency**” and press ►||.



2. Use the ▲ / ▼ buttons to select “**Station List**” or “**Manual Tune**” and press ►||.
3. If you select “**Station List**”, MP710 will automatically scan all frequencies and save the first 30 available stations as channel presets (CH01 to CH30). Use the ▲ / ▼ buttons to select the channel number and press ►||.
4. If you select “**Manual Tune**”, press once or press and hold ▲ / ▼ until you reach the desired frequency channel.

■ FM Volume


1. In the **Schedule FM Recording** menu, use the ▲ / ▼ buttons to select “**FM volume**” and press ►||.



2. Press once or press and hold ▲ / ▼ until you reach the desired volume level.

■ Stopwatch

1. Use the ▲ / ▼ / ◀ / ▶ buttons to select “**Stopwatch**” and press ►||.

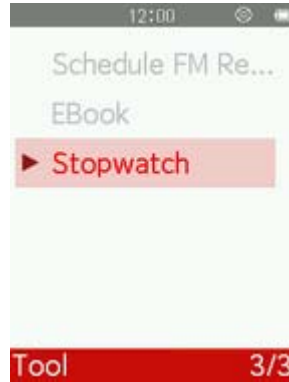 

2. Use the button to start/stop the stopwatch. Use the button to clear the stopwatch.
3. The records of five stopwatch times can be saved. Use the / buttons to select the record number you want to save to.
4. To exit the Stopwatch, press the button.

 
■ Text Reader



To read E-Books on your MP710, you must first transfer “.txt ” files to the player

■ Reading E-Books and Text Files

1. Use the / / / buttons to select “EBook” and press .

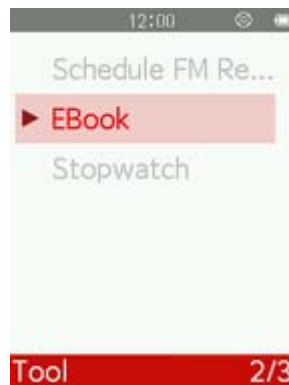

2. The File Browser will open. Use the / buttons to select the source location of the TXT file you want to read and press . (Alternatively, you can find all files in the FILE BROWSER mode)
3. Use the / and / buttons to navigate to the file you want to read and press .







 
4. Press to go to the next page. Press to go back one page. To enable **Auto Page Turn** press . Press again to turn pages manually.




- o The MP710 only supports “.txt” format text files (unicode UTF-8 or UTF-16).

■ Auto Page Turn Interval

Sets the speed at which pages are automatically turned.

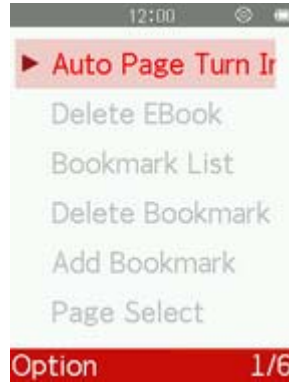



1. While reading a text file in the E-BOOKS mode, press the  button to open the Options menu.
2. Use the  /  buttons to select “Auto Page Turn Interval” and press .

 





3. Use the  /  buttons until you reach the desired interval time of pages turning automatically and press  to confirm. (Adjustment range: 2~30 Sec)




■ Delete EBook

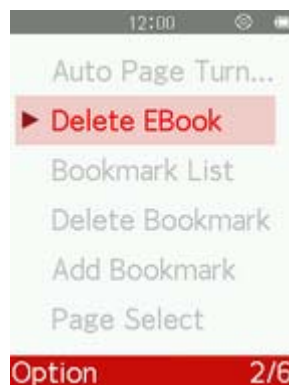 1. With a file open in the E-BOOKS mode, press the  button to open the Options menu.
2. Use the  /  buttons to select “Delete EBook” and press . A “Confirm File Delete” message will appear.



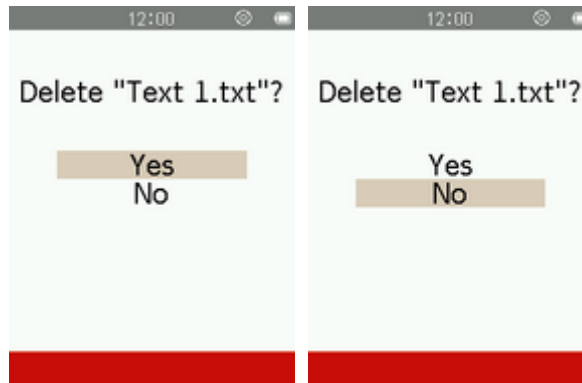


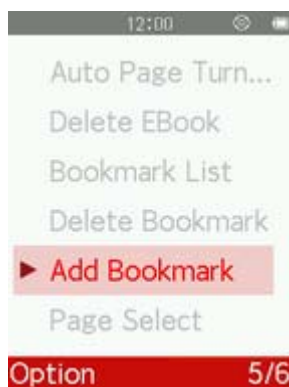 
3. Use the  /  buttons to highlight “Yes” and press  to delete the text file currently open, or select “No” to return to the Options menu without deleting.




■ Add Bookmark




This function can be used to mark a specific place within a text file so you can easily return to it in the future.

 
1. While reading a text file in the E-BOOKS mode, press the  button to open the Options menu.
2. Use the  /  buttons to select “Add Bookmark”.



3. Press the  button to bookmark the current page that you are reading.




■ Bookmark Select

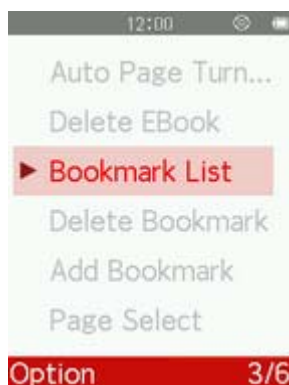
1. While reading a text file in the E-BOOKS mode, press the  button to open the Options menu.
2. Use the  /  buttons to select “Bookmark List”.




3. Use the  /  buttons to select a previously added bookmark and press .

■ Delete Bookmark

 1. While reading a text file in the E-BOOKS mode, press the  button to open the Options menu.
2. Use the  /  buttons to select “Delete Bookmark”.

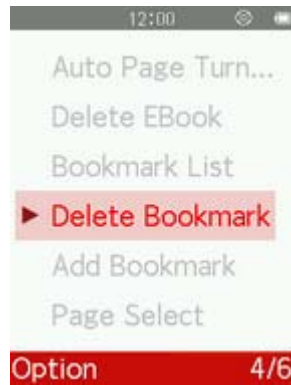

 3. Use the / buttons to select the bookmark you want to delete, and press .

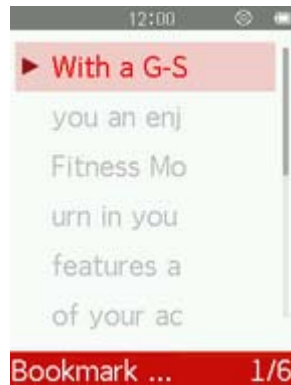


4. Use the / buttons to highlight “Yes” and press to delete the selected bookmark, or select “No” to return to the Options menu without deleting.

■ Page Select

This function lets you jump to a certain position of the document.

 1. While reading a text file in the E-BOOKS mode, press the button to open the Options menu.
2. Use the / buttons to select “Page Select” and press .

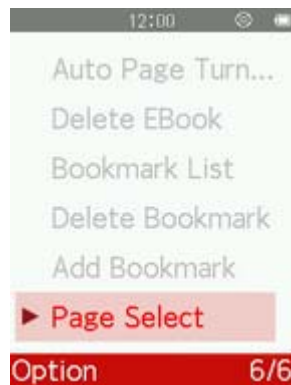







3. Press / to increase or decrease page number and press .






File Browser |





■ Browsing the Internal Memory

 1. Press and hold the  button to enter the Main Menu.
2. Use the  /  /  /  buttons to select “**File Browser**” and press .

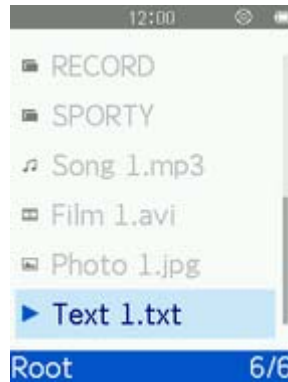
 








 
3. Use the  /  buttons to scroll up and down through the available folders and files in the root directory.






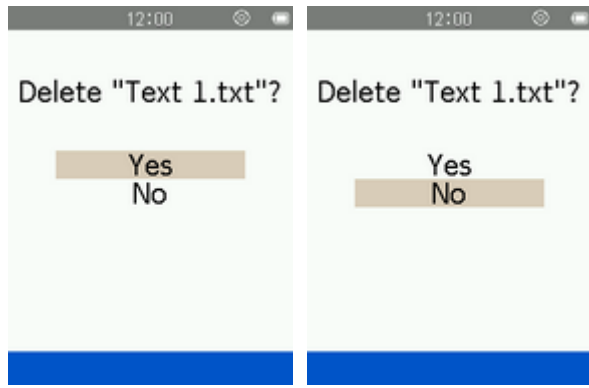 
4. To open a folder or file, highlight it and press either  or .
5. To exit a folder and move up one level, press  or .

■ Deleting Files

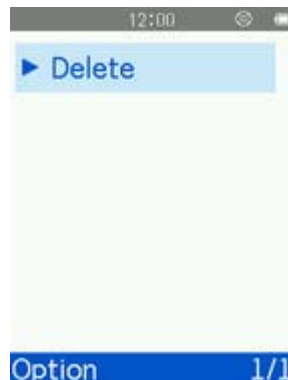1. In the File Browser menu use the  /  and  /  buttons to highlight a file or folder and press the  button to open the Options menu.
2. Use the  /  buttons to select “**Delete**” and press . A “**Confirm File Delete**” message will appear.









3. Use the  /  buttons to highlight “**Yes**” and press  to delete the file, or select “**No**” to return to the previous screen.




Settings |

■ Settings Menu

1. Press and hold the  button to go to the Main Menu.
2. Use the  /  /  /  buttons to select "**Settings**" and press .

 


3. To exit the **SETTINGS** menu, press the  button.


■ Power Saving




This function sets a time delay to automatically power OFF the MP710 when none of the functions is in use, thus prevents the MP710 from running out of battery.

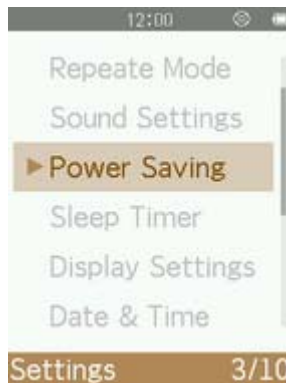 
1. In the **SETTINGS** menu, use the  /  buttons to select "**Power Saving**" and press .

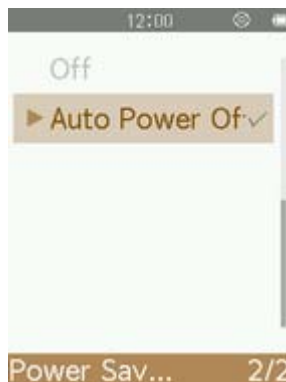

2. Use the  /  buttons to select "**Auto Power off**" to adjust auto power off timer or "**Off**" to turn off this function.



 3. Use the  /  buttons the select the preferred time delay and press  to confirm. (Adjustment range: **1 Minute ~ 99 Minute**)

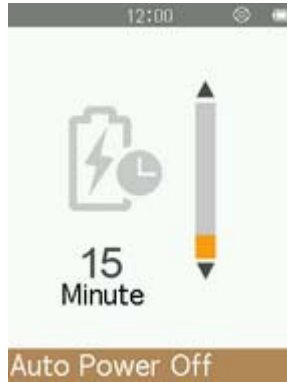

■ Sleep Timer

This function sets a time delay to automatically power OFF the MP710, regardless of its status.

1. In the **SETTINGS** menu, use the / buttons to select “**Sleep Timer**” and press .

 


2. Use the / buttons to select “**Sleep Time**” to adjust sleep time or “**Off**” to turn off this function.
3. Use / buttons until you reach the desired time delay and press to confirm. (Adjustment range: **1 Minute ~ 99 Minute**)




■ Brightness

1. In the **SETTINGS** menu, use the / buttons to select “**Display Settings**” and press .

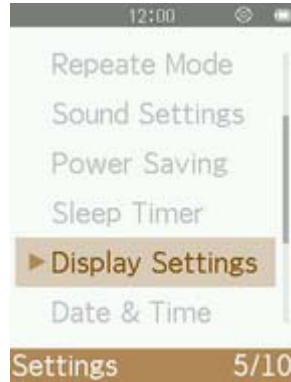

 
2. Use the ▲ / ▼ buttons to select “**Brightness**” and press ▶️.

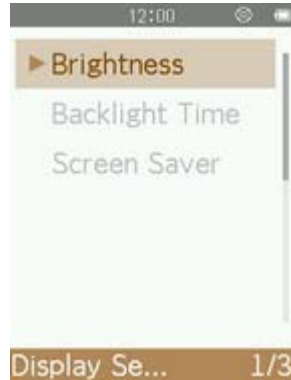


3. Use ▲ / ▼ buttons until you reach the desired level of brightness and press ▶️ to confirm. (Adjustment range: 0 ~ 10)

■ Backlight Time

 1. In the **SETTINGS** menu, Use the ▲ / ▼ buttons to select “**Display Settings**” and press ▶️.

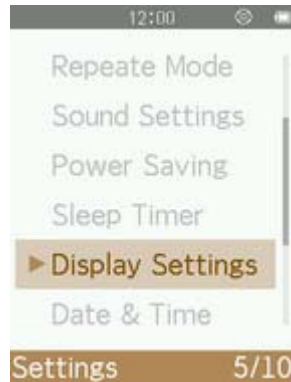

 
2. Use the ▲ / ▼ buttons to select “**Backlight Time**” and press ▶️.

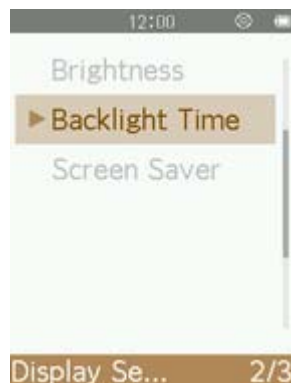


3. Use the ▲ / ▼ buttons to select the desired interval time, press ▶️ to confirm.

■ Screen Saver

 1. In the **SETTINGS** menu, use the ▲ / ▼ buttons to select “**Display Settings**” and press ▶️.

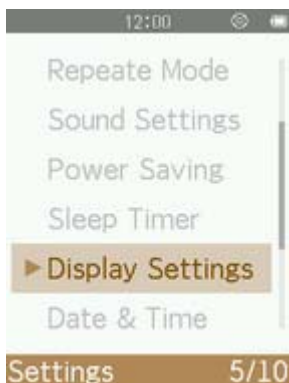

 2. Use the ▲ / ▼ buttons to select “**Screen Saver**” and press ▶️.

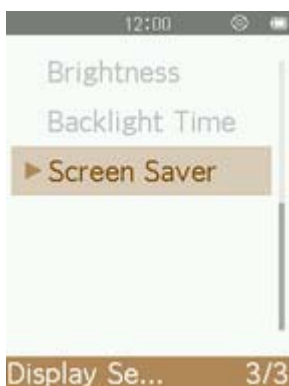


3. Use ▲ / ▼ buttons to select screen saver type and press ▶️ to confirm.

■ Date & Time


This option lets you adjust the local date and time.

 1. In the **SETTINGS** menu, use the ▲ / ▼ buttons to select “**Date & Time**” and press ▶️.

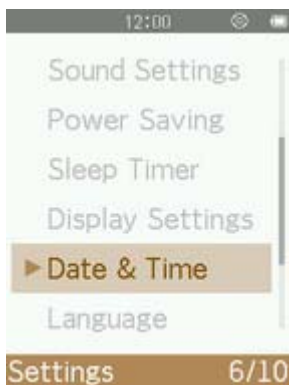

2. Use the ▲ / ▼ buttons to select “**Set Time**”, “**Set Date**” or “**Set Time Format**” and press ▶️.

 3. Use ◀️ / ▶️ to move between Year, Month, Day, 12hr/24hr, Hour, Minute, and AM/PM.

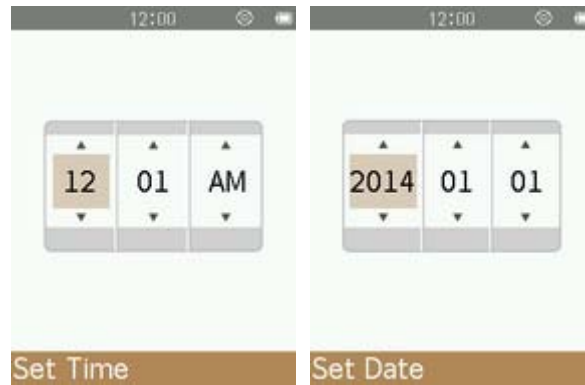

4. Adjust the values of each field with the ▲ / ▼ buttons.
5. Press ► to confirm your new time settings.

■ Language

Sets the MP710's display language, including menus, song/album titles, artist names, and lyrics.

1. In the **SETTINGS** menu, use the ▲ / ▼ buttons to select "**Language**" and press ►.



2. Select your language with the ▲ / ▼ buttons and press ► to confirm.




■ Format Internal Memory

This option will permanently delete all files stored in the player's internal memory. Please be sure to backup any songs, pictures, or other files you want to save before proceeding.

1. In the **SETTINGS** menu, use the ▲ / ▼ buttons to select "**Format Internal Memory**" and press ►.



2. A confirmation screen will appear. Select “**Yes**” again only if you are sure you want to erase all files stored in the player’s internal memory and press , or select “**No**” to return to the SETTINGS menu.




■ Factory Settings

This option will return all settings to their default values.

1. In the **SETTINGS** menu, use the  /  buttons to select “**Factory Settings**” and press .



2. A confirmation screen will appear. Select “**Yes**” to return to default settings and press , or select “**No**” to return to the SETTINGS menu.




Driver Installation |

■ Driver Installation for Windows® XP, Vista, 7 and 8

No drivers are required. These Windows® Operating Systems have built-in drivers to support the MP710. Plug your MP710 into an available USB port and Windows® will install the necessary files. A “**Removable Disk**” drive (for the MP710 internal memory) with a newly assigned drive letter will appear in the **My Computer** window.

■ Driver Installation for Mac® OS X 10.0, or Later

 No drivers are required. Plug your MP710 into an available USB port and your computer will automatically detect it.

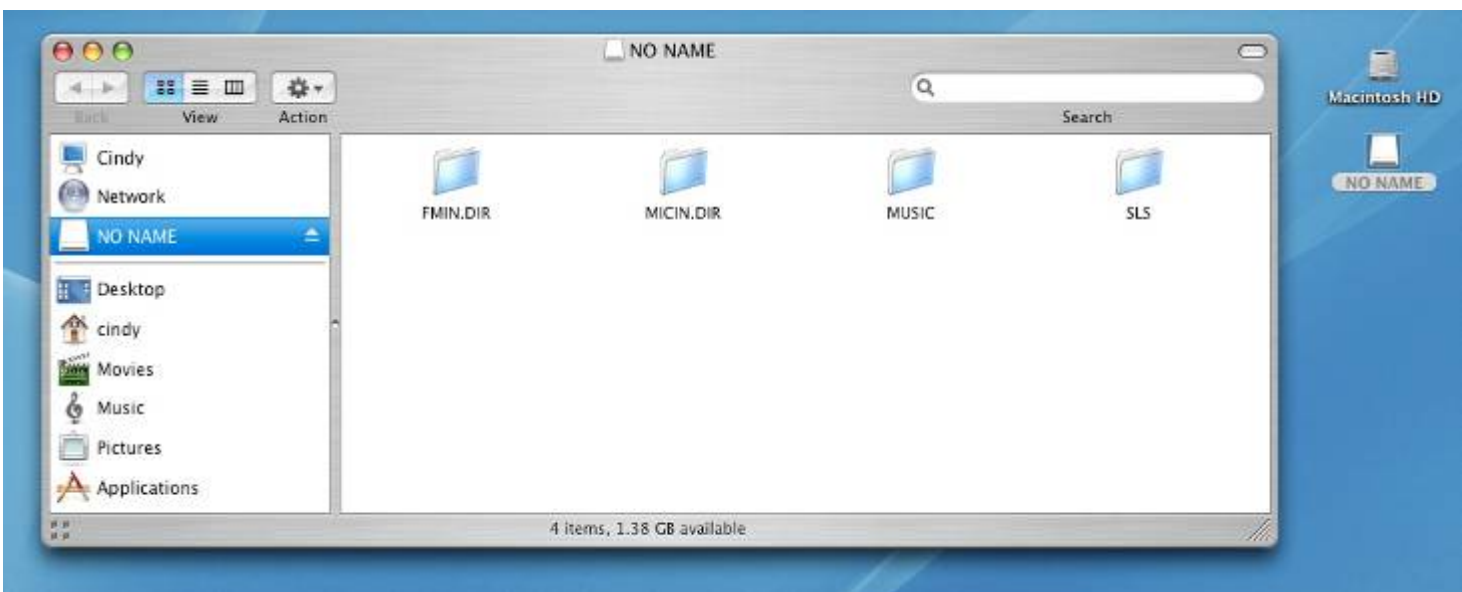

■ Driver Installation for Linux® Kernel 2.4, or Later

No drivers are required. Plug your MP710 into a USB port and mount it.

1. Create a directory for the MP710.

Example: `mkdir /mnt /MP710`

2. Mount the MP710.

Example: `mount -a -t msdos /dev/sda1 /mnt /MP710`



NEVER use Windows to format your MP710.

Connecting to a Computer |

 
■ Transferring Files to the MP710

If you want to use your Digital Music Player to do more than listening to the radio, you must transfer music files, pictures, movies or TXT files to the MP710. You can also use the MP710 as a portable flash drive to transfer your important documents and other files.




NEVER plug the MP710 into a USB hub or an external USB port located on a keyboard, monitor or other peripheral. ***This may cause damage to your digital music player.*** When connecting to a computer, Please plug the MP710 directly into your computer's built-in USB port.

1. Plug the small end of the USB cable into the Micro USB port on the MP710 and plug the large end of the cable into an available USB port on your desktop or notebook computer. The internal Li-Polymer battery will begin charging.

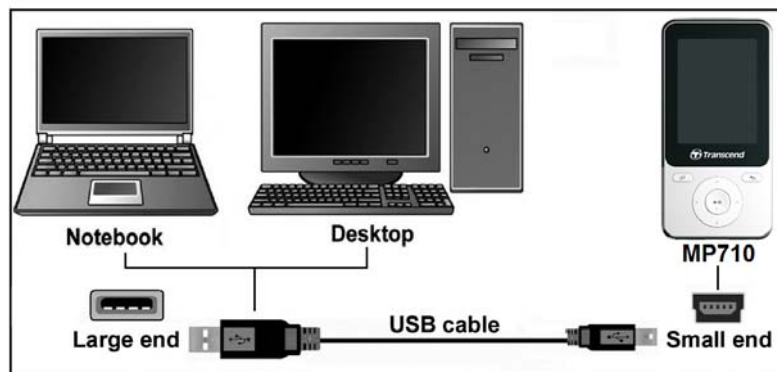

 2. When connected to a computer a USB connection screen will appear.

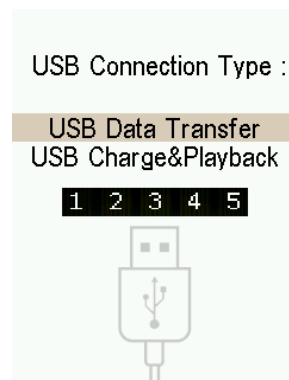

- **USB Data Transfer:** For transferring files to and from the player's internal memory.
- **USB Charge & Playback:** For charging the battery while continuing to use the music playback functions of the player. No data transfer is possible in this mode.

Note: Both connection modes will charge the internal battery, however when “USB Data Transfer” is chosen, the player’s audio and video functions will not be available.

3. Use the ▲ / ▼ buttons to select your desired connection mode.

If you are using Windows®, a “Removable Disk” drive with a newly assigned drive letter will appear in the **My Computer** window.




*Note: (F:) is an example drive letter – your “My Computer” window may differ

4. To transfer **photos, videos, e-book text files, and non-protected music** to the MP710, the USB Connection Type in the Settings menu must be set to “USB Data Transfer.” With this connection type, you can transfer files by simply dragging them onto the MP710’s Removable Disk drive letter. You can also create your own folders within the MP710 and copy files directly to the folders.
5. Always disconnect the MP710 from a computer by selecting and following the instructions for the “**Safely Remove Hardware**” icon that can be found on the Windows® Toolbar at the bottom of the computer screen



NEVER unplug the MP710 during file transfer. Unplug the MP710 only when Windows informs it is safe to do so.

■ Disconnecting the MP710 in Windows® XP, Vista, 7 and 8

 
1. Select the **Hardware** icon  on the system tray.
2. The **Safely Remove Hardware** pop-up window will appear. Select it to continue.



3. A window will appear stating “The ‘USB Mass Storage Device’ device can now be safely removed from the system.”



4. Unplug the MP710 from your computer.

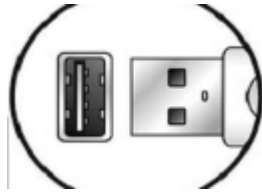

■ **Disconnecting the MP710 in Mac[®] OS 10.0 or Later**

1. Drag and drop the Disk icon that corresponds to your MP710 into the trashcan.
2. Unplug your MP710 from the USB port.

■ **Disconnecting the MP710 in Linux[®] Kernel 2.4 or Later**

1. Execute **umount /mnt /MP710** to un-mount the device.
2. Unplug your MP710 from the USB port.

Troubleshooting |

If a problem occurs with your MP710, please first check the information listed below before taking your MP710 for repair. If you are unable to remedy a problem from the following hints, please consult your dealer, service center, or local Transcend branch office. We also have FAQ and Support services on our websites.

■ **Operating system cannot detect the MP710**

Check the following:


- Is your MP710 properly connected to the USB port? If not, unplug it and plug it in again.
- Is your MP710 connected to the Mac keyboard? If yes, unplug it and plug it into an available USB port on your Mac Desktop.
- Is the USB port enabled? If not, refer to your computer (or motherboard) user's manual to enable it.

■ **The MP710 will not Power ON**



Check the following:

- Is the MP710 connected to your computer? If so, unplug it.
- Is the battery out of power? If so, please recharge the battery.

■ **I cannot transfer files to the MP710**

Unplug the MP710 from your computer, wait a moment, and plug it back in. If this does not work, try pressing the "Reset" button  for 3 to 5 seconds.

■ **Buttons aren't working**

Is the LOCK icon () displayed? If yes, press and hold  to unlock it.

■ **I cannot hear audio playback**

- Have you downloaded any music files onto the MP710? If not, then you must first do so from your computer or the Internet.
- Are the earphones properly connected to the earphone jack? If not, reconnect them.
- Is the volume loud enough? If not, increase the volume level until the music can be heard.

■ **Song/album/artist name is not displayed correctly on the screen**

- The default language of the MP710 is English. Please set the player to the appropriate language first.
- The MP710 music playback screen displays song details based on each file's ID3 tag information. You can modify the ID3 tags of your music files by using Windows Media Player or Winamp.
- If no ID3 tag data is available, only the file name will be displayed on the music playback screen.

■ **Intermittent music playback**


Unplug the earphones and plug them back in again to make sure they are securely connected.

■ **MP710 Powers OFF automatically**

The MP710 features **Sleep Timer** and **Auto Power Off** functions, which are power-saving features. You can

preset your MP710 to Power-OFF automatically after 1~99 minutes. Please refer to the SETTINGS section for more information.

■ **MP710 just isn't working properly**

If your MP710 ever stops working properly, or locks up, try Powering it ON and OFF a few times, if this does not correct the problem, you can **Reset** the unit by pressing the “**Reset**” button  for 3 to 5 seconds.

■ **I cannot find the file that was just copied to the MP710**

Re-copy the file and refer to the “Disconnecting from a Computer” section to remove the **MP710** after the copy process is completed.

■ **A File that was just deleted still appears**

Re-delete the file and refer to the “Disconnecting from a Computer” section to remove the **MP710** after the delete process is completed.

■ **MP710 does not operate after formatting in Windows®**

Formatting the MP710 using the “Quick Format,” or “Full Format” option in Windows® erases the default system information that the MP710 requires to operate. To re-install the system information, please visit <http://www.transcend-info.com/> and download a Firmware Update for your MP710.

■ **How do I find out what Windows Media Player version I am using?**

- Open your Windows Media Player program.
- Click on the “**Help**” menu and select the “**About Windows Media Player**” option.
- The version of your Windows Media Player will be displayed on the computer screen.

■ **I cannot view Photo files on my MP710**

The MP710 only supports “.JPG,” “.BMP”. Photo files, please make sure that the photo is one of these files types.

■ **I cannot read E-book files on my MP710**

The MP710 only supports “.TXT” E-book files, please make sure that the E-book is saved in Unicode UTF-8 or UTF-16 format.

■ **Lyrics Sync: Why can't I see the words of the song I am listening to?**

For detailed Lyrics Sync instructions, please link to the FAQ section on our website <http://www.transcend-info.com/Support/FAQ-736/>

Specifications |

Size (L x W x H):	88 mm × 44.3 mm × 10.0 mm (3.46 x 1.74 x 0.39 inches)
Weight:	39 g (1.38 ounces)
Music Formats:	MP3, WMA and WAV
Video Formats	AVI, AMV
Photo Formats	JPEG, BMP
Recording Format:	PCM (WAV)
Estimated Battery Life: (fully charged battery)	42 Hours of continuous music playback
Compression Rates:	32Kbps to 320Kbps
Data Retention:	Up to 10 years
Erase Cycles:	≥ 100,000 times
Signal-to-Noise Ratio:	≥ 90dB
Certificates:	CE, FCC, BSMI
Warranty:	2-year limited

Ordering Information |

<i>Device Description</i>	<i>Memory Size</i>	<i>Transcend P/N</i>
MP710 Digital Music Player (WHITE)	8GB	TS8GMP710W

Recycling & Environmental Considerations |



Recycling the Product (WEEE): Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potential negative consequences on the environment and human health.



Battery Disposal: Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

For products with non-exchangeable built in batteries: The removal of (or the attempt to remove) the battery invalidates the warranty. This procedure is only to be performed at the end of the product's life.

Warranty Policy |

All Transcend Information, Inc. ("Transcend") products are warranted and tested to be free from defects in material and workmanship and to conform to the published specifications. During the warranty period, should your product(s) fail under normal environment and operating conditions due to improper workmanship or materials, Transcend will provide warranty service pursuant to the following terms and conditions.

Warranty Period and Service

- Your MP710 product is covered by this Warranty for a period of two year(s) from the original purchase date (Li-Polymer battery for a period of six months) . Proof of the original purchase date is required for warranty service.
- Transcend will inspect the product and at its sole discretion make repairs or replace it with a new or refurbished one. Under special circumstances, Transcend may provide a functionally equivalent replacement or refund at the depreciated cost. Transcend's decision shall be final and binding.
- Regarding out-of-warranty products, Transcend may reasonably charge for repairs and parts replacement.

Limitations

- Any software or digital content included with the product, in disc, preloaded or downloadable form, is not covered under this Warranty. This Warranty does not cover any damage caused by any accident, man-made destroy, abuse, mishandling or improper usage, alteration, abnormal mechanical or environmental condition, acts of nature, improper installation, or problems with electrical power.
- This Warranty will be void for product physical defect or appearance damage, alteration to product warranty, anti-counterfeit/quality stickers or serial/electronic numbers, or unauthorized repair or opening/modification of the product case.
- This Warranty does not apply to the transferees of products and/or anyone who stands to profit from this Warranty without Transcend's prior written authorization.

Disclaimer

- TRANSCEND SHALL NOT BE RESPONSIBLE FOR DATA LOSS FOR ANY REASON, AND WILL NOT PROVIDE THE SERVICE OF DATA RECOVERY AND BACKUP.
- TRANSCEND BEARS NO LIABILITY FOR ANY PRODUCT DEFECT OR DAMAGE AND DATA LOSS ARISING FROM THE WARRANTY SERVICE DELIVERY, AND RECOMMENDS THAT YOU HAVE A BACKUP OF YOUR DATA PRIOR TO CLAIMING WARRANTY SERVICE.
- TO THE FULLEST EXTENT PERMITTED BY APPLICABLE LAWS, TRANSCEND DISCLAIMS ALL LIABILITIES WITH RESPECT TO PRODUCT AND THE USE, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF NON-INFRINGEMENT, CONSEQUENTIAL, INDIRECT AND INCIDENTAL DAMAGES, LOST OF PROFIT, BUSINESS AND GOODWILL, DAMAGES RESULTING FROM DATA LOSS, OR FAILURE OF ANY THIRD PARTY EQUIPMENT.
- IN NO EVENT SHALL TRANSCEND BE LIABLE FOR ANY PERSONAL INJURY OR DEATH AND PROPERTY LOSS ARISING FROM THE USE OF THE PRODUCT IN THE EQUIPMENT WHICH PERSONAL INJURY OR DEATH IS LIKELY TO BE CAUSED BY DEFECT AND MALFUNCTION OF THE PRODUCT, INCLUDING BUT NOT LIMITED TO MEDICAL OR MEDICAL-RELATED EQUIPMENT, MILITARY OR MILITARY-RELATED EQUIPMENT, AIRCRAFT, TRAFFIC CONTROL EQUIPMENT, DISASTER PREVENTION SYSTEM, COMBUSTION CONTROL SYSTEM, AND NUCLEAR EQUIPMENT.

Other Statement

- THIS WARRANTY IS EXCLUSIVE AND COMPLETE, SUPERSEDES ALL PRIOR WRITTEN OR ORAL PROPOSALS AND UNDERSTANDINGS, AND EXCLUDES THE WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHETHER EXPRESSLY OR IMPLIEDLY.
- IN THE EVENT THAT SOME STATES AND JURISDICTIONS SET TIME LIMITS ON WARRANTIES, THIS WARRANTY WILL BE ENFORCED TO THE FULLEST EXTENT PERMITTED BY APPLICABLE LAWS.
- IN THE EVENT THAT SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, TRANSCEND WILL STICK TO THE WARRANTY PERIODS SET FORTH ABOVE.
- Transcend may obtain access to the data and information ("Information") stored in the product when providing the warranty service, and agrees not to disclose, without your prior written consent, any Information to any third parties other than the employees on a service-providing basis.

Online Registration

To expedite warranty service, please access to <http://www.transcend-info.com/Support/registration> to register your product within 30 days of the original purchase date.

Version Update

This Warranty may be updated from time to time, and the version published on Transcend Official Website shall prevail (<http://www.transcend-info.com/Warranty>).



Transcend Information, Inc.

<http://www.transcend-info.com/>

*The Transcend logo is a registered trademark of Transcend Information, Inc.

*The specifications mentioned above are subject to change without notice.

*All logos and marks are trademarks of their respective companies.