MP710 Digital Music Player

Firmware Update Instructions

(Please be sure to back up your files before updating the firmware)

(If you already have FW install program, please uninstall it first, than newly install latest Firmware.)

Note:

a. This procedure will initialize the player, and will restore settings to default values. For the safety of your data, please copy your music, videos, recordings, or other files to a computer.
b. Please remove any other USB device (excluding : mouse, key board) on your PC to ensure Firmware Upgrade successfully.
c. DO NOT disconnect the power until the Firmware Upgrade is complete.

Upgrade Procedure:

1. Please turn off your MP710

2. Hold the MP710 ”Back” button and connect with your computer. Extract the .ZIP file and then execute “MP710 Firmware Update Utility.exe” on the executable file. (When installation window pops up , please choose the “Install” button)

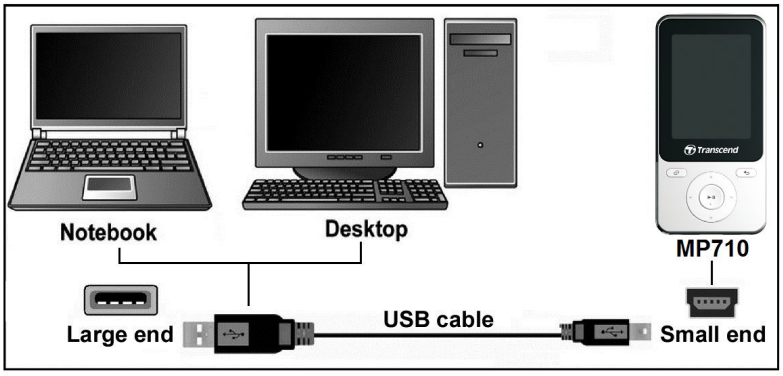

3. After checking the files in MP710 have been backup and releasing the MP710 “Back” button, click the “OK” button.

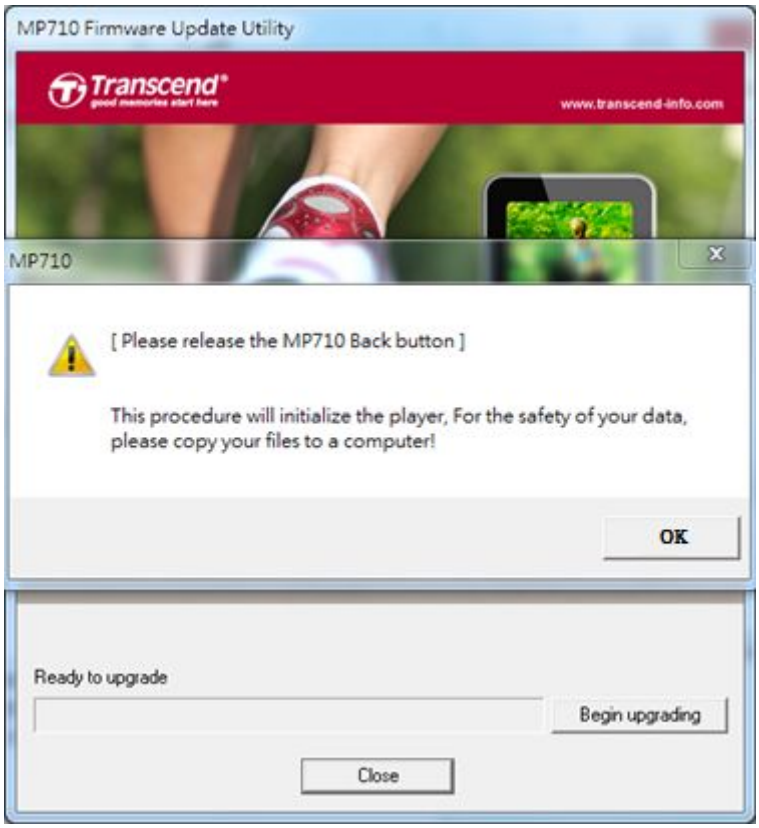

4. After several seconds, click the “Begin” button to begin updating the firmware version of your MP710.

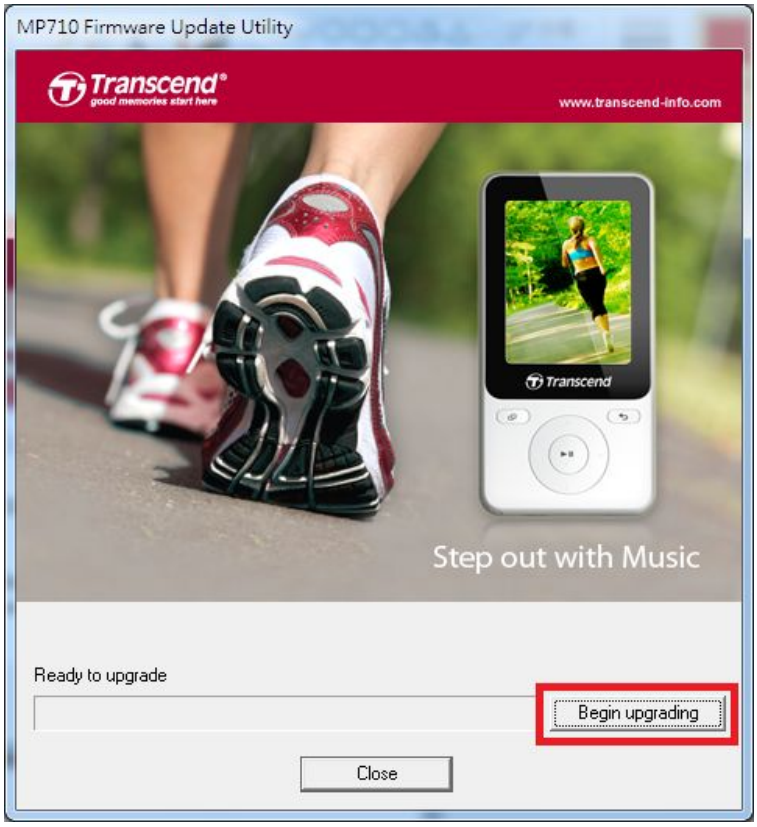

5. Once the firmware update has successfully completed, a “Upgrade was successful, the program will exit! ” message will be displayed in the window. Please click the “OK” button to close the “MP710 Firmware Update Utility”.

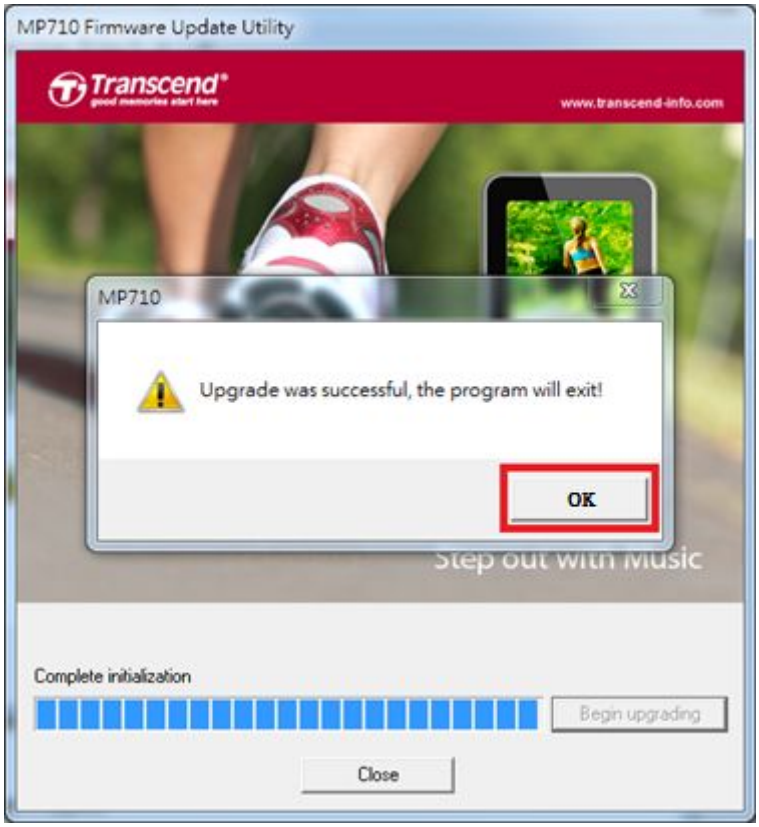

Please disconnect the MP710 from your computer and restart the MP710. After several seconds, from the MP710 Settings, select “Player Information” to confirm the player has been updated to the new firmware.